Užívateľská príručka

User manual

H3000



ANTIK technology

CE

Obsah

Content

Nakladanie s elektrozariadením



Nefunkčné, vyradené, resp. opotrebované (podľa Vášho zváženia) elektronické zariadenie, je potrebné odovzdať na miestach na to určených.

Elektronické zariadenie je potrebné separovať od nevytriedeného komunálneho odpadu a odovzdať ho v celku (myslí sa tým aj s batériou, prípadne nabíjačkou).

Pokiaľ sa so starým elektronickým zariadením nebude nakladať podľa uvedených bodov, môže dôjsť k negatívnemu vplyvu na životné prostredie a taktiež na zdravie ľudí.

Ak však staré elektronické zariadenie odovzdáte na miestach na to určených, samotný spracovateľ garantuje jeho zhodnotenie (materiálové, alebo iné), čím aj Vy prispievate k opätovnému použitiu jednotlivých súčastí elektronického zariadenia a k ich recyklácii.

Všetky informácie na tomto letáku sú zhrnuté pod symbolom uvedeným na každom elektronickom zariadení. Účel tohto grafického symbolu spočíva v spätnom odbere a oddelenom zbere elektroodpadu. Nevyhadzovať v rámci komunálneho odpadu! Odpad je možné spätne odobrať na miestach na to určených!

Bezpečnostné upozornenia

Aby sa používaním telefónneho prístroja predišlo nebezpečenstvu požiaru, úrazu, poraneniu osôb prípadne poškodeniu majetku, je potrebné dodržiavať nasledujúce **bezpečnostné pokyny:**

Nepokúšajte sa prístroj otvoriť, ak je potrebná oprava alebo zásah do prístroja, obráťte sa na poskytovateľa služby ktorý zabezpečí odstránenie poruchy kvalifikovaným pracovníkom.

K napájaniu prístroja používajte výlučne iba schválený sieťový adaptér.

Neumiestňujte telefónny prístroj do blízkosti tepelného zdroja, zdroja prachu alebo otrasov, v blízkosti vody, napr. pri sprche, umývadle, na mokrom podklade, alebo pri bazéne.

S telefónnym prístrojom zaobchádzajte opatrne, hrubým zaobchádzaním môže dôjsť k poškodeniu prístroja alebo jeho nefunkčnosti.

Na čistenie prístroja nepoužívajte agresívne chemikálie, čistiace prostriedky obsahujúce chemikálie, ani silné saponáty.

Prístroj nefarbite, farba môže zaniesť pohyblivé časti prístroja a znemožniť jeho správne fungovanie.

Ak je niektorá časť prístroja poškodená, prístroj neopravujte, odpojte sieťový adaptér a urýchlene kontaktujte poskytovateľa služby.

Prístroj neinštalujte ani nepoužívajte pri búrke. Hrozí nebezpečenstvo úrazu elektrickým prúdom.

Napájací kábel starostlivo umiestnite tak, aby naň nikto nemohol stúpiť ani oň zakopnúť.

Nepoužívajte telefónny prístroj v agresívnych prostrediach, napr. lakovňa.

Nefunkčné, vyradené alebo opotrebované zariadenie je potrebné separovať od komunálneho odpadu a odovzdať ho poskytovateľovi služby, ktorý bezplatne zabezpečí likvidáciu alebo recykláciu nepoužiteľných súčastí prístroja.

Oboznámte s týmito bezpečnostnými pokynmi všetkých potenciálnych užívateľov telefónneho prístroja v mieste jeho pripojenia.

1. Všeobecný popis

1.1 Symboly na displeji

 Hlasitý príposluch

 Off hook mode

 Stav dobitia batérie (prázdna, polovičná, plná)

INT Interný hovor

EXT Externý hovor

 Konferenčný hovor

 Prijaté SMS (jedna : nová správa, dve : plná pamäť)

 Nastavený budík

 Stretnutie

1.2 Popis tlačidiel



2. Používanie telefónu

Vložte batérie do slúchadla. Slúchadlo sa pokúsi spojiť so základňou a na displeji zobrazí “Hlada zak.”. Po spojení so základňou úvodná správa sa zobrazí na displeji.

2.1 Indikácia mimo dosahu

Ak sa počas hovoru vzdialite so slúchadlom z dosahu základne, zariadenie vyšle akustický signál a konverzácia bude prerušená. Priblížením sa k základni predídete prerušeniu hovoru.

Ak sa vzdialite od základne so slúchadlom v pohotovostnom režime, displej zobrazí “**Mimo dosah**”.

2.2 Telefonovanie

2.2.1 Manuálny hovor

- Keď slúchadlo je v pohotovostnom režime stlačte  tlačidlo a ak počujete tón voľte číslo volaného.
- Počas hovoru sa na displeji zobrazuje dĺžka aktuálneho hovoru.
- Pre ukončenie hovoru použite tlačidlo,  alebo ,, **Koniec** „ (Tlačidlo 2)

2.2.2 Hovor s predvoleným číslom

Číslo volaného môžete zadať predvoľbou čísla v pohotovostnom režime slúchadla. Takto zadané číslo môžete upravovať v prípade chybnej voľby. Ak je zariadenie v pohotovostnom režime postupujte podľa nasledujúcich krokov:

- Zadajte číslo volaného.
- Stlačte tlačidlo “**Vymazat**” (Tlačidlo 2) pre vymazanie poslednej zadanej číslice, alebo stlačte viackrát pre vymazanie viacerých číslic.
- Stlačte tlačidlo pre vymazanie všetkých číslic.
- Stlačte tlačidlo pre vytočenie čísla.

2.3 Opätovné vytočenie čísla

Funkcia umožňuje opätovné vytočenie jedného z posledných desiatich volaných čísiel.

- So slúchadlom v pohotovostnom režime stlačte tlačidlo hore na displeji sa zobrazia posledné volané čísla.
- Vyberte číslo pomocou tlačidla .
- Stlačte tlačidlo pre vytočenie čísla .
- Stlačte tlačidlo “**Možnosti**” (Tlačidlo 1).
- Vyberte “Detaily” z možností pre náhľad celého volaného čísla.
- Vyberte “**Uložiť**” z možností pre uloženie čísla do telefónneho zoznamu.
- Vyberte “**Vymazat**” z možností pre vymazanie čísla zo zoznamu predchádzajúcich volaných čísiel.
- Vyberte “**Volať**” z možností pre uskutočnenie ďalšieho hovoru.

2.4 Prijatie hovoru

Prichádzajúci hovor je signalizovaný na základni aj na slúchadle a “**EXT**” bliká. Stlačte tlačidlo alebo “**Prijať**” (Tlačidlo 1) pre zdvihnutie hovoru. Pre ukončenie prijatého hovoru stlačte tlačidlo ,alebo tlačidlo “**Koniec**” (Tlačidlo 2), prípadne ukončite hovor vložením slúchadla do základne.

2.5 Zobrazenie dĺžky hovoru

Táto funkcia sa spúšťa po 5s po začatí konverzácie. Funkcia má informatívny charakter nezaručuje presný údaj o dĺžke hovoru. Čas sa zobrazuje na displeji ešte 3s po ukončení hovoru. Dĺžka hovoru sa zobrazuje v minútach a sekundách. Telefón zobrazuje dĺžku hovoru od momentu kedy sa pokúšate volané číslo vytočiť bez ohľadu na to či sa spojenie uskutoční, alebo nie. Rovnako čas trvania hovoru sa zobrazuje na displeji do momentu pokiaľ neukončíte aj vy hovor.

2.6 Vyhľadávanie slúchadla

V prípade že používateľ hľadá slúchadlo, stačí jednoducho stlačiť tlačidlo na základni: slúchadlo začne zvoniť na 20s. Stlačením rovnakého tlačidla ukončíte zvonenie. Po nájdení slúchadla stlačením tlačidla  ukončíte zvonenie.

2.7 Medzičíselná pauza

Počas zadávania volaného čísla je možné vložiť troj sekundovú pauzu, napr. predvoľba a telefónne číslo pre ľahšie spojenie.

- Zadajte predvoľbu
- Stlačte **Možnosti** (Tlačidlo 1) a vyberte položku "Vloz medzeru" alebo stlačte tlačidlo 
- Stlačte "**OK**" (Tlačidlo 1).

2.8 Úprava hlasitosti v slúchadle

Počas hovoru je možné upravovať úroveň hlasitosti v slúchadle.

Počas hovoru:

- Stlačte “**Možnosti**” (Tlačidlo 1) a potom použite tlačidlo  pre výber položky “**Hlasitost slu.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Stlačte tlačidlo  pre nastavenie nízku 1, strednú 2, alebo 3 vysokú úroveň.
- Stlačte “**OK**” (Tlačidlo 1).

2.9 Stíšenie mikrofónu

Počas konverzácie je možné stíšiť mikrofón. Počas stíšenia displej zobrazuje “**Stisene**”. Nastavenie počas hovoru:

- Stlačte “**Možnosti**” (Tlačidlo 1) a vyberte položku “**Stlmit mikr.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Pre opustenie zo stíšeného módu mikrofónu stlačte “**Možnosti** (Tlačidlo 1) a vybere položku “**Mikr. povoleny**” alebo stlačte “**Povolene**” (Tlačidlo 2).

2.10 Čakajúci hovor?

Počas hovoru je možné volajúceho na opačnej strane dať do holdu. Počas holdu sa zobrazí na displeji “**Cakajuci**” a opačná strana počuje melódiu.

Nastavenie počas hovoru:

- Stlačte “**Možnosti**” (Tlačidlo 1) a vyberte “**Cakajuci**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Pre návrat z “**Cakajuci**” módu, stlačte “**Možnosti**” (Tlačidlo 1) a vyberte “**Ukoncenie hold**” a stlačte “**OK**” (Tlačidlo 1) alebo stlačte “**Neaktivne**” (Tlačidlo 2).

2.11 Register Recall

Počas externého hovoru môže volajúci prepojiť hovor na niekoho iného pripojeného na rovnakú PBX pomocou funkcie Register Recall function.

- Stlačte tlačidlo 

(držte dole tlačidlo **#**) počas externého hovoru. Základňa odošle FLASH signál na linke.

2.12 Interné hovory medzi slúchadlami

Pri viacslúchadlovej konfigurácii je možné uskutočňovať interné hovory medzi dvomi slúchadlami.Tak so 4 slúchadlami registrovanými na jednu základňu môžete uskutočniť dva interné a jeden externý hovor.

- Pre uskutočnenie interného hovoru:
- Stlačte tlačidlo 

(držte dole tlačidlo *****).
- Vyberte číslo slúchadla použijúc tlačidlo 
- Stlačte “**OK**“ (Tlačidlo 1)
- Volané slúchadlo začne zvoniť a na displej zobrazí ikonu INT. Stlačte tlačidlo  pre prijatie hovoru.
- Po stlačení  na oboch slúchadlach ukončíte konverzáciu.

2.13 Prepojenie hovoru medzi dvoma slúchadlami

Pri prepojení externého hovoru z jedného slúchadla na druhé:

- Počas hovoru stlačte “**Možnosti**” key (Tlačidlo 1).
- Vyberte “**Interný hovor**”.
- Stlačte “**OK**“ (Tlačidlo 1)

alebo

počas hovoru stlačte tlačidlo  (podržte tlačidlo *****).

A potom

- vyberte zamýšľané číslo slúchadla pomocou tlačidla 
- Stlačte “**OK**“ (Tlačidlo 1)
- Keď volané slúchadlo odpovedá začína interný hovor.
- Na prepojenie externého hovoru jednoducho stlačte tlačidlo 

2.14 Konferenčný hovor

Externý hovor môže byť konferovaný ďalším slúchadlom počas hovoru. Postupujte podľa nasledujúceho :

- Počas hovoru stlačte “**Možnosti**” key (Tlačidlo 1).
- Vyberte “**Interný hovor**”.
- Stlačte “**OK**“ (Tlačidlo 1)

alebo

- Počas hovoru stlačte  (podržte dole *****).

A potom

- vyberte zamýšľané slúchadlo pomocou tlačidla  a stlačte “**OK**“ (Tlačidlo1)
- Keď volané slúchadlo odpovedá začal interný hovor.

- Stlačte **Možnosti** (Tlačidlo 1).
- Vyberte “**Konferenčný**”.
- Externý hovor je spojený do oboch slúchadiel a konferenčný hovor je k dispozícii. Displej zobrazí ikonku .
- Stlačením off jedno z dvoch slúchadiel prepojí hovor na druhé slúchadlo.

2.15 Signalizácia prichádzajúceho hovoru

Ak počas interného hovoru prichádza externý hovor, telefón akustický upozorní v slúchadle na prichádzajúci hovor a zobrazí na displeji skratku EXT. Interný hovor v tomto prípade môžete ukončiť stlačením tlačidla a prichádzajúci externý hovor začne zvoniť na slúchadle, stlačením tlačidla prijmete hovor.

2.16 Vypínanie slúchadla

2.16.1 Vypnutie

Stlačte tlačidlo na dve sekundy.

Po potvrdzujúcom tóne je slúchadlo vypnuté.

2.16.2 Zapnutie

Stlačte tlačidlo na dve sekundy.

Slúchadlo vyhľadá základňu a zobrazí na displeji “Hlada zakl.” Po nájdení základne sa zobrazí na displeji úvodná “Sluchadlo“.

3. Používanie zoznamu

3.1 Zapisovanie

Zariadenie má abecedné usporiadanie záznamov v zozname telefónnych čísel (meno, číslo).Umožňuje uložiť až 100 záznamov, každý s dĺžkou čísla až 25 znakov a text s dĺžkou 15 znakov.

Pre zápis v lubovolnej pozícii použite nasledujúci postup v pohotovostnom režime telefónu:

- Stlačte “**Tel. zozn.**” (Tlačidlo 2) a potom použite tlačidlo  pre výber položky “**Pridat zapis**”.
- Stlačte “**OK**” (Tlačidlo 2).
- Vložte nové meno. Každé tlačidlo má viac znakov. Jednotlivé tlačidlá a znaky špecifikuje priložená tabuľka:

Tlačidlo	Počet stlačení tlačidla pre znak								
	1	2	3	4	5	6	7	8	9
1	@	.	,	?	1	!	-	&	
2	A	B	C	2	a	b	c	à	
3	D	E	F	3	d	e	f	è	é
4	G	H	I	4	g	h	i	ì	
5	J	K	L	5	j	k	l		

6	M	N	O	6	m	n	o	ò	
7	P	Q	R	S	7	p	q	r	s
8	T	U	V	8	t	u	v	ù	
9	W	X	Y	Z	9	w	x	y	z
0		_	£	€	0	$	:	;	

Po zápise znakov stlačte tlačidlo  alebo čakajte sekundu pred zapísaním ďalšieho znaku**.**

Počas zápisu znakov v prípade potreby stlačte "**Vymazat**" (Tlačidlo 2) pre vymazanie posledného znaku.

- Stlačte "**OK**" (Tlačidlo 1) pre zápis telefónneho čísla
- Vložte nové telefónne číslo.
- Stlačte "**Možnosti**" (Tlačidlo 1).
- Vyberte "**Ulozit**" možnosť pre uloženie zápisu.
- Vyberte "**Prirad zvonenie**" možnosť pre priradenie iného zvonenia pre každý zápis.

Upozornenie: Prvé písmeno mena sa zapisuje vždy veľkým, nasledujúce písmena môžete voliť veľké, alebo malé.

Písmená vľavo od kurzora sa mažu s "**Vymazat**" key (Tlačidlo 2). Písmená sú vždy zapisované vľavo od kurzora.

3.2 Vytáčanie čísla zo zoznamu

- Stlačte “**Tel. zozn.**” (Tlačidlo 2) a vyberte položku “**Hladat**”.
- Stlačte “**OK**” key (Tlačidlo 2).
- Napíšte prvé písmeno mena .
- (napr. “E” pre Ema) : Stlačte tlačidlo 3 dvakrát a listujte pomocou tlačidla 
- Stlačte “**Hladat**” (Tlačidlo 1).
- Mená sú vyhľadávané v abecednom poradí.
- Stlačte  alebo tlačidlo “**Hovor**”.

3.3 Zobrazenie zápisov

- Stlačte “**Tel. zozn.**” (Tlačidlo 2) a vyberte položku “**Najdi a uloz**”.
- Stlačte “**OK**”   (Tlačidlo 1).
- Stlačte “**Hladat**” (Tlačidlo 1).
- Vyberte požadovaný zápis.
- Stlačte “**Moznosti**” (Tlačidlo 1) a vyberte položku   “**Nahlad**”.
- Stlačte “**OK**” key (Tlačidlo 1).
- Číslo alebo informácia (EXT/INT, VIP) sa zobrazia.

3.4 Vymazanie zápisu

- Stlačte “**Tel. zozn.**” (Tlačidlo 2) a potom použite tlačidlo  pre výber položky “**Vymazat**”.
- Stlačte “**OK**” (Tlačidlo 1) a potom je možnosť vybrať “**Po jednom**” alebo “**Vymaz vsetky**”.
- Výberom “**Po jednom**” možnosti vymažete požadovaný záznam.
- Stlačte “OK” a “**Hladat**” (Tlačidlo 1).
- Vyberte požadovaný zápis.

- Stlačte “**Vymazat** ” (Tlačidlo 1) pre vymazanie vybratého zápisu.
- Výberom “**Vymaz vsetky**” možnosti vymažete všetky záznamy. Potom sa zobrazí na displeji “Vymazat cely zoznam?” .
- Stlačte “**OK**” (Tlačidlo 1) pre potvrdenie.

3.5 Zmena zápisu

- Stlačte **Tel. zozn.** a potom vyberte položku “**Zmenit**” pomocou tlačidla 
- Stlačte “**OK**” (Tlačidlo 1).
- Stlačte “**Hladat**” (Tlačidlo 1).
- Vyberte požadovaný zápis.
- Stlačte “**OK**” (Tlačidlo 1).
- Ak je to nevyhnutné , zmeňte meno.
- Stlačte “**OK**” (Tlačidlo 1).
- Ak je to potrebné, zmeňte telefónne číslo.
- Stlačte “**Options**” (Tlačidlo 1) a vyberte položku “**Save**”.
- Stačte “**OK**” (Tlačidlo 1) pre potvrdenie.

4. Textové správy (SMS)

Telefón umožňuje odosielať a prijímať textové správy (SMS) ak je služba operátora aktivovaná. Na prechod do SMS módu stlačte “**Menu**” (Tlačidlo 1) v pohotovostnom režime telefónu a vyberte “**Spravy**”. Pre návrat z SMS menu o jednu úroveň stlačte “**Spet**” (Tlačidlo 2) alebo tlačidlo.  Pre návrat do pohotovostného režimu telefónu stlačte tlačidlo .

Maximálna dĺžka SMS správy je 160 znakov.

SMS : **S**hort **M**essage **S**ervice

4.1 SMS

4.1.1 Písanie a odosielanie SMS

- Stlač “**Menu**” (Tlačidlo 1)
- Vyberte “**Spravy**” ikonu.
- Stlač “**OK**” (Tlačidlo 1).
- Vyberte “**Napisat**” pomocou tlačidla 
- Stlačte “**OK**” (Tlačidlo 1).
- “Text:_” sa zobrazí na displeji.
- Tlačidlá umožňujú zadávanie znakov podľa nasledujúcej tabuľky. Každé tlačidlo disponuje viacerými znakmi. Priradenie jednotlivých tlačidiel a znakov špecifikuje priložená **tabuľka:**

Tlačidlo	Počet stlačení tlačidla pre znak								
	1	2	3	4	5	6	7	8	9
1	.	,	?	!	1	-	@	&	
2	A	B	C	2	a	B	c	A	
3	D	E	F	3	d	E	f	È	é
4	G	H	I	4	g	H	i	ì	
5	J	K	L	5	j	K	l		
6	M	N	O	6	m	N	o	ò	
7	P	Q	R	S	7	P	q	r	s
8	T	U	V	8	t	U	v	ù	
9	W	X	Y	Z	9	W	x	y	z
0	SP	_	£	€	0	$	:	;	
*****	*	+	=	/	%				
#	#	(	)	<	>	“	‘		

Poznámka : SP je skratka pre “medzeru”

- Pri písaní znakov sú potrebné kratučké pauzy medzi jednotlivými stlačeniami toho istého tlačidla.
- Na konci textu použite tlačidlo pre medzeru.
- Počas písania môžete používať "**Vymazat**" (Tlačidlo 2) pre vymazanie posledného znaku.
- Použite tlačidlo pre pohyb v texte a tlačidlo "**Vymazat**" (Tlačidlo 2) pre vymazanie ľubovoľného znaku. Vymazávanie znakov postupuje vľavo od kurzora.
- Stlačte "**Moznosti**" (Tlačidlo 1) po napísaní textu.

Poznámka : Ak sa pri písaní novej správy zobrazí na displeji "**Plna pamat**" potom musíte vymazať prijaté správy zaberajúce príliš mnoho pamäte.

4.1.1.1 Možnosti SMS

- Vyberte "**Odoslat**" a stlačte "**OK**" (Tlačidlo 1) pre vstup do "**Moz. odosielania**"
- Vyberte "**Ulozit**" a stlačte "**OK**" (Tlačidlo 1) pre uloženie správy do rozpísaných správ.
- Vyberte "**Vymazat text**" a stlačte "**OK**" (Tlačidlo 1) pre vymazanie celej správy.

4.1.1.2 Možnosti odosielania

- Vyberte "**Odoslat jednemu**" a stlačte "**OK**" (Tlačidlo 1): "**Telefonne cislo:** " sa zobrazí. Pozrite 4.1.1.3.
- Vyberte "**Odoslat viacerym**" a stlačte "**OK**" (Tlačidlo 1): Hromadné odosielanie. Môžete posielať naraz najviac piatim adresátom. Pozrite 4.1.1.3.
- Vyberte "**Cislo term.**" A stlačte "**OK**" (Tlačidlo 1): Zvoľte zamýšľané číslo adresáta.

- Vyberte "**Notifikacia**" a stlačte "**OK**" (Tlačidlo 1) pre obdržanie notifikačných správ o doručení.

4.1.1.3 Zadávanie telefónneho čísla

"**Telefonne cislo:**" zobrazené na displeji.

- Napíšte adresátove telefónne číslo manuálne.
- Alebo stlačte "**Moznosti**" (Tlačidlo 1) a vyberte **"Telefonne cislo"** pre výber čísla adresáta zo zoznamu.
- Alebo stlačte "**Moznosti**" (Tlačidlo 1) a vyberte "**Prijate hovory**" pre výber čísla adresáta zo zoznamu prijatých hovorov.
- Pri hromadnom odosielaní môžete zadať päť adresátov použijúc tlačidlo  .
- Stlačte "**Odoslat**" (Tlačidlo 1) pre okamžité odoslanie.
- Display zobrazí "**Odosiela...**" a ak správa je odoslaná úspešne display zobrazí "**Ulozit odoslanu spravu ?**". Ak chcete uložiť odoslanú správu stlačte "**OK**" (Tlačidlo 1). Ak nechcete uložiť správu stlačte "**NO**" (Tlačidlo 2).

Poznámka: Ak zlyhá odoslanie správy displej zobrazí "**Ulozit neodoslanu?**". Ak chcete uložiť správu stlačte "**OK**" (Tlačidlo 1). Ak nechcete uložiť túto správu stlačte "**NO**" (Tlačidlo 2). Pri hromadnom odosielaní displej zobrazí **"Pri zlyhaní zopakovať ?"**. Ak chcete zopakovať odoslanie správy stlačte "**OK**" (Tlačidlo 1).

4.1.2 Prijaté správy

Prichádzajúca správa je signalizovaná na displeji “>>> *SMS* <<<”. Po prijatí správy sa zobrazí na displeji ✉ ikonka a “SMS prijatá.

Pre čítanie novej správy:

- Stlačte “**Nahlad”** (Tlačidlo 1). Telefónne číslo poslednej správy sa zobrazí na displeji.
- Ak sa chcete vrátiť do pohotovostného režimu stlačte tlačidlo“**Spet**”.
- Ak si chcete prezrieť viacero prijatých správ je možné ich prezerať pomocou tlačidla
- Stlačte “**OK**” (Tlačidlo1) pre čítnie textu.

Kontrola správ:

- Stlačte tlačidlo a na displeji sa zobrazí “**Prijate SMS**”.
- Stlačte “**OK**” tlačidlo (Tlačidlo 1):zobrazí sa telefónne číslo poslednej správy.
- Ak je tam viac prijatých správ opäť si ich môžete prezrieť pomocou tlačidla .
- Stlačte “**OK**” (Tlačidlo 1) na prečítanie správy.

Maximálne 18 krátkych správ môže byť uložených v prijatých správach.

4.1.2.1 Odstráňovanie prijatých správ

Ak sa zobrazia na displeji ikonka ✉ a “**Schranka prijatych sprav plna**” znamená to nemôže prijímať žiadne nové správy, pretože má plnú pamäť. To sa môže stať ak je v schránke prijatých správ viac ako 18 SMS. (160 znakov) v prijatých správach, alebo ak text prijatých správ zaberá v pamäti

príliš veľa miesta. V oboch prípadoch je potrebné vymazať jednu alebo viac uložených správ.

Vymazanie správy:

- Stlačte “**Moznosti**” (Tlačidlo 1) a vyberte“**Vymazat**” .
- Stlačte “**OK**” pre potvrdenie. “**Sprava vymazana**” sa zobrazí na displeji a správa bude odstránená.
- Stlač “**Moznosti**” (Tlačidlo 1) a vyberte “**Odpovedat**”.
- Výber “**Odpovedat”** vám umožní písať a odpovedať na prijatú správu. Po zadaní je telefón pripravený na záznam novej správy. Pre odoslanie správy si pozrite časť ,,Písanie a posielanie správ“ s jediným rozdielom že nepotrebujete zadávať číslo adresáta nakoľko je sa správa odosiela na číslo z ktorého ste obdržali správu.

4.1.2.2. Preposielanie správ

- Stlač “**Moznosti**” (Tlačidlo 1) a vyber “**Preposlat**”.
- Výberom “**Preposlat**” môžete preposlať prijatú správu inej osobe. Telefón je pripravený pre zadanie nového telefónneho čísla. Správa sa preposiela podobne, ale nie je potrebné editovať text odosielanej správy.

4.1.2.3 Editovanie prijatých správ

- Stlačte “**Moznosti**” (Tlačidlo 1) a vyberte “**Zmenit**”.
- Výberom “**Zmenit**” môžete upravovať prijatú správu a zaslať ju odosielateľovi, alebo novému adresátovi.
- Po zobrazení zvolenej správy:
- Použite  tlačidlo na pohyb v texte.
- Použite “**Vymazat**” (Tlačidlo 2) pre vymazanie neželaných znakov.

- Vložte alebo pridajte nový text. Pre odoslanie správy použite postup pre písanie a odosielanie správ.

4.1.2.4 Detaily prijatej správy

- Stlačte “**Moznosti**” (Tlačidlo 1) a vyberte “**Detaily**” pre náhľad odosielateľovho čísla a dátum odoslania.

4.1.2.5 Uložte číslo do zoznamu

- Stlač “**Moznosti**” a vyberte “**Ulozit cislo**”.
- Vložte číslo.
- Potvrdte tlačidlom “**OK**” . Číslo odosielateľa bude uložené do zoznamu.

4.1.3 Osobná schránka správ

Všetky odoslané a uložené správy (max. 18 správ) môžu byť opäť otvorené.

- Vyberte “**Osobne SMS**” pomocou tlačidla 
- Stlačte “**OK**” (Tlačidlo 1). Display zobrazí poslednú uloženú správu.
- Ak máte uložených viac správ môžete v nich listovať pomocou tlačidla .
- Stlačte “**OK**” (Tlačidlo 1) na prečítanie správy.

4.1.3.1 Vymazanie správy

Ak je pamäť plná alebo je potrebné viac miesta v pamäti, môžete vymazať niektorú správu.

Pre vymazanie správy:

- Stlačte “**Moznosti**” tlačidlo a vyberte “**Vymazat**”.
- Stlačte “**OK**” (Tlačidlo 1) pre potvrdenie: “Sprava vymazana” sa zobrazí a správa bude vymazaná.

4.1.3.2 Odosielanie správ

Toto umožňuje preposlať uloženú správu.

- Stlačte “**Moznosti**” a vyberte “**Odoslat**”.

Máte možnosť odoslať uloženú správu opäť. Telefón bude pripravený na zadanie ďalšieho telefónneho čísla. Pri odoslaní správy použite postup pre písanie a odosielanie správ.

4.1.3.3 Editovanie správy

Stlačte “**Moznosti**” (Tlačidlo 1) a vyberte “**Zmenit**”.

Výberom “**Zmenit**” môžete upravovať prijatú správu a zaslať ju odosielateľovi, alebo novému adresátovi. Po zobrazení zvolenej správy:

- Použite  tlačidlo na pohyb v texte.
- Použite “**Vymazat**” (Tlačidlo 2) pre vymazanie neželaných znakov.
- Vložte alebo pridajte nový text.

Pre odoslanie správy použite postup pre písanie a odosielanie správ.

4.1.3.4 Detaily

Stlačte “**Moznosti**” (Tlačidlo 1) a vyberte “**Detaily**” pre náhľad odosielateľovho čísla a dátum odoslania.

4.1.4 Vymazanie všetkých správ

Môžete vymazať všetky prijaté SMS pomocou:

- Použi tlačidlo a nalistuj “**Vymazat vsetky**”.
- Stlač “**OK**” (Tlačidlo 1)>

4.1.4.1 Odstránenie všetkých prijatých SMS

- Použi tlačidlo a nalistuj “**Prijate sms**”.
- Stlač “**OK**” (Tlačidlo 1). Na displeji sa zobrazí **“Vymazat vsetky prijate sms ?”**
- Potvrdte tlačidlom “**OK**” (Tlačidlo 1). “**Prijate SMS vymazane**” sa zobrazí na displeji a všetky prijaté SMS budú vymazané.

4.1.4.2 Odstránenie všetkých osobných SMS

- Použi tlačidlo a nalistuj “**Osobne SMS**”.
- Stlač “**OK**” (Tlačidlo 1). Na displeji sa zobrazí **“Vymazat vsetky osobne SMS ?”**

Potvrďte tlačidlom “**OK**” (Tlačidlo 1).**“Osobne SMS vymazane”** sa zobrazí na displeji a všetky prijaté SMS budú vymazané.

4.2 Nastavenia

4.2.1 Povolenie SMS funkcie

- Stlač tlačidlo **Menu** (Tlačidlo 1) vyberte “**Spravy**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Nastavenia**” pomocou tlačidla.
- Potvrdte “**OK**” (Tlačidlo 1).
- Vyberte “**SMS sluzby**” pomocou tlačidla.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte **“Zapnute”** alebo **“Vypnute”** pomocou
- Potvrdte “**OK**” (Tlačidlo 1) .

Poznámka: Ak SMS funkcia nie je aktívna keď sa chcete dostať režimu SMS potom prvá položka bude **“SMS sluzby”.**

4.2.2 Služby SMS centra

Pre príjimanie a odosielanie SMS potrebujete telefónne číslo SMS centra vášho providera.

- Stlač **Menu** (Tlačidlo 1) a vyberte “**Sluzby**”.
- Potvrdte “**OK**” (Tlačidlo 1).
- Vyberte “**Nastavenia**” pomocou tlačidla.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “ **Centr. sluzieb**” pomocou tlačidla.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Centr. sluz. 1**” alebo “**Centr. Sluz. 2**” pomocou .
- Potvrdte “**OK**” (Tlačidlo 1).
- Zapíšte telefónne číslo serv. centra.

- SMS Centrum 1: Číslo SMS centra 1 bude vždy použité pri odosielaní SMS.
- SMS Centrum 2: Číslo SMS centra 2 bude vždy použité pri príjimaní SMS.
- Potvrdte “**OK**” (Tlačidlo 1).

4.2.3 Nastavenie čísla terminálu

Ak je potrebné pripojiť na linku viac SMS telefónov je potrebné na každom zadať iné číslo terminálu od 0 do 9.

Týmto spôsobom môžete nastaviť až 5 slúchadiel pripojených k jednej základni. Ku každému slúchadlu je možné priradiť iné číslo terminálu.

Nastavenie čísla terminálu so slúchadlom v pohotovostnom režime:

- Stlačte **Menu** tlačidlo (Tlačidlo 1) a vyberte “**Správy**”.
- Potvrdte “**OK**” key (Tlačidlo 1).
- Vyberte “**Nastavenia**” pomocou tlačidla 
- Potvrdte “**OK**” (Tlačidlo 1).
- Vyberte “**Cislo terminalu**” pomocou  tlačidla.
- Potvrdte“**OK**” (Tlačidlo 1).
- Stlačte “**OK**” (Tlačidlo 1) a použite tlačidlo  na výber terminálu 0 až 9.
- Potvrdte “**OK**” (Tlačidlo 1) .

5. Zoznam hovorov

5.1 Zobrazenie mena (CLID)

Telefón umožňuje používať službu “CLID’” tzn. zobrazenie mena volajúceho, ak je v telefónnom zozname telefónu, pri prichádzajúcom, prípadne čakajúcom, alebo zmeškanom hovore. Ak hovor prichádza, po prvom zvonení sa zobrazí meno na displeji.

5.1.1 Zoznam prijatých hovorov

Čísla posledných dvadsiatich prijatých hovorov sú uložené v telefóne.

- Stlačte “**Menu**” (Tlačidlo 1)
- Vyberte “**Zoznam hovorov**”
- Potvrdte “**OK**” (Tlačidlo 1).
- Vyberte “**Prijate**”.
- Potvrdte “**Nast.**” key (Tlačidlo 1).
- Vyberte prijatý hovor pomocou tlačidla 
- Stlačte **Nast** .
  - Vyberte “**Detaily**” z možností pre zobrazenie informácii o čase, dátume a telefónnom čísle prijatého hovoru..
  - Vyberte “**Ulozit**” z možností pre uloženie do zoznamu.
  - Vyberte “**Vymazat**” z možností pre vymazanie zo zoznamu prijatých hovorov.
  - Vyberte “**Volat**” z možností pre začatie hovoru.

5.2 Zoznam zmeškaných hovorov

Slúchadlo automaticky zaznamená čísla posledných dvadsatich zmeškaných hovorov.

Pri zmeškanom hovore sa na displeji zobrazí “**N Zmeskane**” (N je počet zmeškaných hovorov).

- Pre zobrazenie zmeškaného hovoru stlačte “**Nahlad**” (Tlačidlo 1) alebo prejdite do “**Zoznam hovorov**” Menu.
- Vyberte “**Zmeskane**”.
- Stlačte tlačidlo **Nast.**.
  - o Vyberte “**Detaily**” možnosti pre zobrazenie informácii týkajúcich sa dátumu, času a čísla zmeškaného hovoru.
  - o Vyberte “**Ulozit**” z možností pre zápis do telefónneho zoznamu.
  - o Vyberte “**Vymazat**” pre vymazanie zo zoznamu zmeškaných hovorov.
  - o Vyberte “**Volat**” z možností pre vytočenie čísla.

5.3 Zoznam volaných hovorov

Slúchadlo automaticky zaznamená čísla posledných desiatich volaných hovorov.

- Pre zobrazenie zoznamu volaných hovorov stlačte tlačidlo  alebo prejdite do “**Zoznam hovorov**” Menu.
- Vyberte “**Volane**”.
- Potvrdte “**OK**” key (Tlačidlo 1).
- Vyberte pomocou tlačidla  konkrétny hovor.
- Stlač tlačidlo **Nast.**

- Vyberte “**Detaily**” možnosti pre zobrazenie informácii týkajúcich sa dátumu, času a čísla volaného hovoru.
- Vyberte “**Ulozit**” z možností pre zápis do telefónneho zoznamu.
- Vyberte “**Vymazat**” pre vymazanie zo zoznamu volaných hovorov.
- Vyberte “**Volat**” z možností pre vytočenie čísla.

5.4 Vymazávanie zoznamu hovorov

5.4.1 Vymazanie “Prijaté hovory”

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Zoznam hovorov**”.
- Potvrdte “**OK**” (Tlačidlo 1).
- Vyberte “**Vymazat vsetky**” pomocou  tlačidla.
- Potvrdte “**OK**” (Tlačidlo 1).
- Vyberte “**Prijate hovory**” pomocou tlačidla 
- Potvrdte “**OK**” (Tlačidlo 1).
- Na displeji sa zobrazí “**Zmazat vsetky prijate hovory**?”
- Press “**OK**” key (Soft key 1) to confirm.

5.4.2 Vymazanie “Zmeskane hovory”

- Stlačte tlačidlo Menu (Tlačidlo 1) a vyberte “Zoznam hovorov”.
- Potvrdte “OK” (Tlačidlo 1).
- Vyberte “Vymazat vsetky” pomocou tlačidla .
- Potvrdte “OK” (Tlačidlo 1).
- Vyberte “Zmeskane hovory” pomocou 
- Stlačte “OK” (Tlačidlo 1).
- Na displeji sa zobrazi “Vymazat vsetky zmeskane hovory?”
- Potvrdte “OK” (Tlačidlo 1) .

5.4.3 Vymazanie “Volane hovory”

- Stlačte Menu (Tlačidlo 1) a vyberte “Zoznam hovorov”.
- Potvrdte “OK” (Tlačidlo 1).
- Vyberte “Vymazat vsetky” pomocou tlačidla .
- Potvrdte “OK” (Tlačidlo 1).
- Vyberte “Volane hovory” pomocou tlačidla .
- Potvrdte “OK” (Tlačidlo 1).
- Na displeji sa zobrazi “Zmazat vsetky volane hovory?”
- Potvrdte “OK” (Tlačidlo 1) .

5.4.4 Vymazanie “Vsetky hovory”

- Stlačte tlačidlo Menu (Tlačidlo 1) a vyberte “Zoznam hovorov”.
- Stlačte “OK” (Tlačidlo 1).
- Vyberte “Vymazat vsetky” pomocou tlačidla 
- Stlačte “OK” (Tlačidlo 1).
- Vyberte “Vsetky hovory” pomocou tlačidla 
- Potvrdte “OK” (Tlačidlo 1).
- Na displeji sa zobrazí “Zmazat vsetky hovory?”
- Potvrdte “OK” (Tlačidlo 1) .

6. Ďalšie nastavenia slúchadla

Pomocou nasledujúcich nastavení môžete používať ďalšie funkcie slúchadla.

Pre prístup do menu slúchadla stlačte tlačidlo “**Menu**” key (Tlačidlo 1) a vyberte “**Nst. sluchadla**” pomocou tlačidla . Stlačte “OK” (Tlačidlo 1)

Stlačte tlačidlo “**Spet**” key (Tlačidlo 2) alebo tlačidlo  pre návrat do predchádzajúceho menu a tlačidlo  pre návrat do pohotovostného režimu.

6.1 Infračervený diaľkový ovládač

Táto funkcia umožňuje používať slúchadlo ako univerzálny diaľkový ovládač. Ovládač je možné použiť až na 4 rôzne infračervené prijímače – zariadenia: TV, Set-Top Box, Audio a VCR.

Pred použitím infračerveného ovládania je potrebné naprogramovať slúchadlo pre rovnaký rozsah a rovnakými príkazmi aké má originálny ovládač pomocou nasledujúceho postupu.

Ak nenastavíte minimálne jeden profil nie je možné použiť funkcie diaľkové ovládača.

6.1.1 Adaptácia infračerveného kódu ovládača.

S touto funkciou prispôsobíte slúchadlo oddelene pre každé zariadenie, ktoré potrebujete ovládať. Ak potrebujete programovať slúchadlo pre TV, Set-Top Box, Audio and VCR.

Postupujte následovne:

- Umiestnite slúchadlo aj prijímač na stabilný povrch s nasmerovaním infračervených diód presne oproti sebe tak aby mohli zariadenia komunikovať. Položte ich tesne oproti sebe (menej ako 2 cm) a nepohybujte nimi.
- V pohotovostnom režime stlačte tlačidlo “**MENU**” (Tlačidlo 1) .
- Pomocou tlačidla navigácie  nalistujte “**Nst. sluchadla**”, potom potvrdte “**OK**” (Tlačidlo 1).
- Pomocou tlačidla  nalistujte v menu “**Dialkovy ovl.**”.
- Potvrdte “OK” (Tlačidlo 1) pre výber “**Dialkovy ovl.**”.
- Pomocou tlačidla  nalistujte v menu “**IR Progam**”.
- Opäť potvrdte tlačidlom “**OK**” (Tlačidlo 1) pre výber “**IR Program**” (Infračervený programovací mód). Na displeji sa zobrazia možnosti výberu zariadenia. (TV, Set-Top Box, Audio a VCR)
- Pomocou tlačidla  vyberte zariadenie ktoré chcete ovládať (TV, Set-Top Box, Audio a VCR), potom potvrdte “**OK**” (Tlačidlo 1).
- Na displeji sa zobrazí **adaptačné** okno s **Stlacte klav.** (prázdnym) poľom.
- Stlačte tlačidlo slúchadla, ktoré má slúžiť na ovládanie funkcie zariadenia podľa nasledujúcej tabuľky:

TLAČIDLO SLÚCHADLA	FUNKCIE ORIGINÁLNEHO OVLÁDAČA
# key	Zapnúť / vypnúť
0 key	Pre Audio, VCR: Stop Pre TV, Set-Top Box: číslica 0
Tlačidlo 1	Stíšenie
	Programy hore
	Programy dole
	Hlasitosť ubrať
	Hlasitosť pridať
1-9	Pre **TV** a **Set-Top Box** číslice 1-9

- Stlač príslušné tlačidlo pre ovládanie funkcie zariadenia na približne 1 sec. Displej slúchadla zobrazí úspešnosť osvojenia funkcie. V prípade správnej adaptácie sa zobrazí na displeji správa “Uspesne! alebo Zlyhanie! .
- Zopakujte kroky 10 a 11 pre každé uvedené tlačidlo.

Upozornenie: Netraste a nepohybujte slúchadlom a ovládačom počas procesu. Udržte oba ovládače bez pohybu.

Niektoré diaľkové ovládače vyžadujú iný čas pre riadne odoslanie príkazov do slúchadla. Počas kroku 11 preto môžete skúsiť stlačiť tlačidlo niekoľkokrát (kratšie alebo dlhšie ako jednu sekundu).

Ak váš ovládač si neosvojil žiadny z príkazov skúste posunúť ovládače podľa obrázka a vyskúšajte celý postup opäť.





6.1.2 Vymazávanie kódov

Môžete vymazať jeden, alebo všetky podľa potreby.

6.1.2.1 Vymazanie profilu

- V pohotovostnom režime stlačte "MENU" tlačidlo.
- Pomocou tlačidla nalistujte menu "Nst. sluchadla", potom potvrdte "OK" tlačidlom.
- Stlačte tlačidlo a nalistujte menu "Dialkovy ovl.".
- Potvrdte "OK" tlačidlom výber "Dialkovy ovl.".
- Pomocou tlačidla nalistujte menu "Zmazat".
- Potvrdte opäť "OK" tlačidlom výber "Zmazat". Na displeji uvidíte profily nastavené profily. (TV, Set-Top Box, Audio and VCR)
- Pomocou tlačidla vyberte profil, ktorý chcete vymazať. (TV, Set-Top Box, Audio and VCT), a tlačidlom "OK" potvrdte výber.
- Na displeji sa zobrazí správa" Potvrdit?".
- Stlač "OK" tlačidlo pre potvrdenie vynulovania alebo tlačidlom Spet" pre návrat .

6.1.2.2 Vynulovanie všetkých profilov

V pohotovostnom režime stlačte tlačidlo "MENU" .

- Pomocou tlačidla nalistujte menu "Nst. Sluchadla", potom stlačte tlačidlo "OK" .
- Pomocou tlačidla nalistujte menu "Dialkovy ovl.".
- Potvrdte tlačidlom "OK" výber "Dialkovy ovl.".
- Pomocou tlačidla nalistujte menu "Vymazat vsetky".

- Opäť potvrdte tlačidlom “OK” výber “Vymazat vsetky”, potom stlačte “OK” soft key.
- Na displeji sa zobrazí správa ” Potvrdit?”.
- Stlačte “OK” pre potvrdenie vynulovania alebo tlačidlo “Spet” pre návrat.

6.1.3 Používanie funkcie ovládača

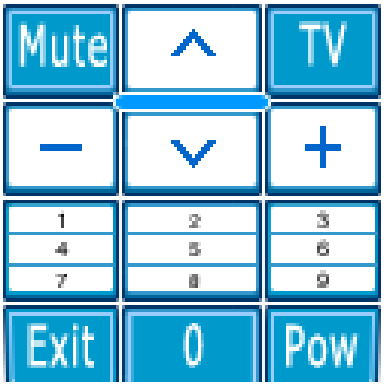
Ak ste úspešne naprogramovali aspoň jeden profil (napr. TV) v slúchadle, teraz ho môžete používať pre ovládanie zariadenia ak je zapnuté v režime diaľkové ovládanie.

Počas režimu pre diaľkové ovládanie slúchadlo sa nevracia automaticky do pohotovostného režimu. Ak je aktivovaná funkcia šetriča, displej sa úplne vypne po 10 sekundách od posledného stlačenia. Po opetovnom stlačení ľubovoľného tlačidla sa opäť podsvietenie displeja zapne.

Počas režimu pre diaľkové ovládanie môžete prijímať hovory. Po ukončení hovoru sa opäť aktivuje v slúchadle režim diaľkového ovládača.

Používanie diaľkového ovládača:

- V pohotovostnom režime jednoducho stlačte a podržte “1” viac ako jednu sekundu pre aktiváciu funkcie diaľkového ovládača. Ak máte naprogramovaný aspoň jeden profil napr. (TV), displej zobrazí virtuálne funkcie infračerveného ovládača podľa priloženej schémy:

 TV	 AUDIO

- Vyberte typ zariadenia pre ktoré chcete nastaviť profil. Vpravo hore sa na displeji zobrazia všetky zadané profily nasledovne:
    - **TV** zobrazí profil pre **TV**
    - **STB** zobrazí profil pre **Set-Top Box**
    - **AUD** zobrazí profil pre **Audio**
    - **VCR** zobrazí profil pre **VCR**
- Teraz keď máte naprogramované slúchadlo budete môcť ovládať vaše zariadenie pomocou príkazov ako sú zadané v 6.1.1

6.2 Zámok klávesnice

Nastavením zámku tlačidiel sú blokované aj odchádzajúce hovory. Príjimať hovory však môžete naďalej. Funkcia je užitočná pre neúmyselné stláčanie tlačidiel a pre ochranu pred kýmkoľvek kto nepozná PIN slúchadla.

Uzamknutie:

- Stlačte tlačidlo **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Potvrdte “**OK**” (Tlačidlo 1).

- Vyberte “**Klavesnica zamknuta**”pomocou tlačidla 
- Potvrdte “**OK**” (Tlačidlo 1).
- Zadajte PIN kód slúchadla (prednastavená je 1590).
- Použite tlačidlo “**Delete**” (Tlačidlo 2) pre vymazanie nesprávneho PIN kódu.
- Potvdte “**OK**” (Tlačidlo 1) .
- “***Klavesnica zamknuta***” sa zobrazí na displeji v pohotovostnom režime.

Pre odomknutie slúchadla a návrat do normálnej funkcionality:

- Stlačte “**Odomknut**” (Tlačidlo 2).
- “**Odomknut klavesnicu?**” sa zobrazí na displeji.
- Stlačte “**OK**” (Tlačidlo 1) a zadajte PIN kód slúchadla (prednastavené je 1590).
- Použite **Zmazat** tlačidlo pre vymazanie.
- Potvrdte “**OK**” (Tlačidlo 1) pre potvrdenie a východ z menu.

6.3 Nastavenie času

Zobrazovanie času je v 24 hodinovom formáte.

- Stlačte tlačidlo **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Potvrdte “**OK**” (Tlačidlo 1).
- Vyberte “**Cas**” pomocou tlačidla 
- Stlačte “**OK**” (Tlačidlo 1).
- Zadajte ďeň/mesiac/rok.
- Potvrdte “**OK**” (Tlačidlo 1).
- Zadajte hodiny/minuty.
- Potvrdte **OK** tlačidlom .

Dátum a čas sa zobrazí na displeji v pohotovostnom režime slúchadla, rok sa nezobrazuje.

6.4 Nastavenie budíka

Slúchadlo je možné použiť aj ako budík.

6.4.1 Aktivovanie budíka

Aktivovaný budík zvoní každý deň v nastavenom čase. Nastavenie budíka je na displeji indikované ikonkou

- o Stlačte tlačidlo **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- o Potvrdte “**OK**” (Tlačidlo 1).
- o Vyberte “**Budik**” pomocou tlačidla .
- o Potvrdte “**OK**” tlačidlom (Tlačidlo 1).
- o Vyberte “**Ano**” pomocou tlačidla .
- o Stlačte “**OK**” (Tlačidlo 1).
- o Zadajte hodiny/minúty.
- o Potvrdte tlačidlom “**OK**” (Tlačidlo 1) .

6.4.2 Deaktivovanie budíka

Budík je nastavený, ale nechcete aby zvonil každý deň.

- o Stlačte tlačidlo **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- o Potvrdte “**OK**” (Tlačidlo 1).
- o Vyberte “**Budik**” pomocou tlačidla
- o Potvrdte tlačidlom “**OK**” (Tlačidlo 1).
- o Vyberte “**Nie**” pomocou .
- o Potvrdte “**OK**” (Tlačidlo 1) pre potvrdenie a návrat.

6.4.3 Vypnutie melódie budíka

Melódia budíka signalizuje zároveň s blikajúcim displejom na slúchadle budenie, približne 20 sekúnd. Stlačením ľubovoľného tlačidla funkciu budík vypnete.

6.5 Nastavenie melódie zvonení externých hovorov

Pre zvonenia mimo základne je možné nastaviť 13 rôznych melódií zvonení v 9 úrovniach hlasitosti.

Pre nastavenie externých zvonení:

6.5.1 Nastavenie zvonení

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Ext. zvonenie**” použitím  tlačidla.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Prehrat**” použitím tlačidla  .
- Stlačte “**OK**” (Tlačidlo 1)
- Vyberte melódiu od 1 do 13.
- Stlačte **OK** (Tlačidlo 1) pre potvrdenie.

6.5.2 Nastavenie úrovne hlasitosti

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Ext. zvonenie**” použitím tlačidla  .
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Hlasitost**” použitím tlačidla  .
- Stlačte “**OK**” (Tlačidlo 1)
- Vyberte hlasitosť od 1 do 9.
- Stlačte **OK** (Tlačidlo 1) pre potvrdenie.

6.5.3 Režim zvonenia

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Ext. zvonenie**” použitím tlačidla .
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Rezim vyzv.**” použitím tlačidla  .
- Stlačte “**OK**” (Tlačidlo 1)
- Vyberte položku a stlačte “**OK**” (Tlačidlo 1) pre výber.
- Pre výber sú tri možnosti režimu: “**Standard**”, “**Vypnute**”, “**Zvon po…**”
- Vyberte “**Standard**” pre zapnutie štandardného vyzváňacieho tónu.
- Alebo vyberte “**Vypnute**” pre zablokovanie vyzváňacieho tónu.
- Alebo vyberte “**Zvonit po**” pre zvonenie po jednom až štyroch zvoneniach a stlačte “**OK**” (Tlačidlo 1). Vyzváňanie je zapnuté podľa zvoleného počtu zvonení.

6.6 Nastavenie melódie zvonení interných hovorov

Pre nastavenie hovorov medzi slúchadlami jedinej základne.

- interné hovory je k dispozícii 13 rôznych melódií zvonení v 9 tich rôznych úrovniach.

Pre nastavenie zvonenia interného hovoru:

6.6.1 Nastavenie zvonenia

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Int. zvon.**” použitím tlačidla  .
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Zvonenie**” použitím tlačidla  . Stlačte “**OK**” (Tlačidlo 1)
- Vyberte melódiu od 1 do 13.
- Stlačte **OK** (Tlačidlo 1) pre potvrdenie.

6.6.2 Nastavenie hlasitosti

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Int. zvon.**” použitím  tlačidla.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Hlasitost**”  použitím.
- Stlačte “**OK**” (Tlačidlo 1)
- Vyberte hlasitosť od 1 do 9.
- Stlačte **OK** (Tlačidlo 1) pre potvrdenie.

6.6.3 Režim zvonenia

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Int. zvon.**” použitím tlačidla  .
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Rezim vyzv.**” použitím tlačidla  .
- Stlačte “**OK**” (Tlačidlo 1)
- Vyberte položky a stlačte “**OK**” (Tlačidlo 1) pre vybratie.
- K dispozícii sú tri režimy: “**Standard**”, “**Vypnute**”, “**Zvonit po** ”
- Vyberte “**Standard**” pre štandardné vyzváňanie.

- o Alebo vyberte “**Vypnute**” pre zablokovanie vyzváňacieho tónu.
- o Alebo vyberte “**Zvonit po**” vyzváňací tón po jednom až štyroch zvoneniach a potvrdte “**OK**” key (Tlačidlo 1).
- o Vyzváňanie je zapnuté podľa zvoleného počtu zvonení.

6.7 Tóny tlačidiel

- o Stlačte Menu (Tlačidlo 1) a vyberte “Nst. sluchadla”.
- o Stlačte “OK” (Tlačidlo 1).
- o Vyberte “Zvuky tlac.” použitím tlačidla  .
- o Stlačte “OK“ (Tlačidlo 1).
- o Vyberte “Nie” pre zablokovanie funkcie a vyberte “Ano” pre zapnutie funkcie.
- o Stlačte “OK” (Tlačidlo 1).

6.8 Nastavenie podsvietenia LCD displeja

- o Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- o Stlačte “**OK**” (Tlačidlo 1).
- o Vyberte “**Podsvietenie**” použitím tlačidla 
- o Stlačte “**OK**“ (Tlačidlo 1).
- o Vyberte “**Standard**” voľba zapnutia podsvietenia na 10 sekúnd.
- o Vyberte **“Podsv. zapnute”** voľba zapnutia podsvietenia stále.

6.9 Nastavenie jazyka

Je možné vybrať jazyk displeja anglicky alebo taliansky. Pre nastavenie jazyka:

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Jazyk**” použitím tlačidla 
- Stlačte “**OK**“ (Tlačidlo 1).

- Vyberte jazyk z ponúkaného výberu.
- Stlačte “**OK**” (Tlačidlo 1) pre potvrdenie a výstup.

6.10 Priame volania

Po aktivácii tejto funkcie stlačením ľubovoľného tlačidla vytočíte vami preddefinované číslo.

Nastavenie a aktivácia:

- Stlačte **Menu** key (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” key (Tlačidlo 1).
- Vyberte “**Priamy hovor**” použitím tlačidla 
- Stlačte “**OK**“ (Tlačidlo 1).
- Vložte telefónne číslo (max 25 číslic) alebo použite “**Vymazat**” (Tlačidlo 2) pre zmazanie pôvodného čísla a vložte nové číslo.
- Stlačte **OK** pre potvrdenie a aktiváciu funkcie.
- Od tejto chvíle stlačením lubovoľného tlačidla začnete hovor na vami zadané číslo. Pre deaktiváciu dvakrát stlačte tlačidlo .

6.11 Funkcia “BabySit”

V prípade že máte dve slúchadla pripojené k jednej základni, každé v inej izbe môžete monitorovať čo sa deje v druhej izbe. Funkciu je možné využívať pre strážienie detí apod.

Zapnutie tejto funkcie:

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Babysit**” použitím tlačidla 

- Stlačte “**OK**“ (Tlačidlo 1).
- Vyberte “**Nie**” pre zablokovanie funkcie a vyberte “**Ano**” zapnútie funkcie.
- Stlačte “**OK**” (Tlačidlo 1).
- Pre deaktiváciu funkcie použite tlačidlo .

6.12 Pridávanie

Na jednu základňu sa môže registrovať až 5 slúchadiel rovnakého modelu, alebo modelu kompatibilného.

Slúchadlo sa môže registrovať až na štyri základne.

6.12.1 Pridávanie a možnosti slúchadla

- Stlačte a podržte tlačidlo na základni na 5 sekúnd, alebo dokiaľ základňa nepotvrdí tónom.
- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Podpora slu.**” Použitím tlačidla 
- Stlačte “**OK**“ (Tlačidlo 1).
- Vyberte číslo základne (od 1 do 4) na ktorú sa má slúchadlo registrovať pomocou tlačidla 
- Potvrdte “**OK**” (Tlačidlo 1).
- Slúchadlo začne hľadať základňu, v momente naviazania spojenia RFPI kód základne sa zobrazí na displeji.
- Potvrdte “**OK**” (Tlačidlo 1) a vložte PIN kód (default 1590).
- Stlačte “**OK**” (Tlačidlo 1) pre potvrdenie.
- Na displeji sa zobrazí **Podpora hotova.**

6.12.2 Priradenie slúchadla k druhej základni

Postup je rovnaký ako v 6.11.1 “**Pridávanie a možnosti slúchadla**”. Na konci postupu základňa automaticky priradí číslo k slúchadlu..

Ak základňa ku ktorej chcete priradiť slúchadlo je iného typu, použite inštrukcie ktoré máte k základni pre registráciu slúchadla. Ak potrebujete priradiť iné slúchadlo k vašej základni, je nevyhnutné aktivovať na základni režim priradenia stlačením a podržaním tlačidla základne na päť sekúnd, dokiaľ sa neozve potvrdzujúci tón, potom je potrebné použiť postup pre ďalšie slúchadlo.

Upozornenie: V každom prípade je nevyhnutné vedieť PIN kód základne na ktorú chcete registrovať slúchadlo.

6.13 Výber základne

Táto funkcia sa používa pre výber jednej zo základni na ktoré je práve slúchadlo prihlásené. Tento výber nebude automaticky zmenený ak slúchadlo stratí synchronizáciu so základňou.

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Vyber zakl.**” použitím tlačidla 
- Stlačte “**OK**“ (Tlačidlo 1), displej teraz zobrazí číslo zvolenej základne.
- Vyberte základňu pomocou tlačidla  a potom stlačte “**OK**” (Tlačidlo 1), teraz slúchadlo skúša sa pripojiť na zvolenú základňu.
- Keď základňa je pripojená stlačte “**OK**” key (Tlačidlo 1) pre potvrdenie.

6.14 Zmena PIN kódu slúchadla

Zmenou PIN kódu slúchadla môžete predísť nežiadúcim zmenám nastavení, prípadne nežiadúcemu prístupu osôb k funkciám telefónu.

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Zmen Pin**” použitím tlačidla  .
- Stlačte “**OK**“ (Tlačidlo 1) a vložte pôvodný PIN kód (default 1590). Použite tlačidlo **Vymazat** pre vymazanie zle vloženého kódu.
- Stlačte “**OK**” (Tlačidlo 1).
- Vložte nový kód (max. 4 digits).
- Stlačte “**OK**” (Tlačidlo 1) a vložte nový kód znova.
- Stlačte “**OK**” (Tlačidlo 1) pre potvrdenie a východ (exit).

6.15 Vynulovanie slúchadla

Funkcia vynulovania umožňuje užívateľovi vymazať všetky nastavenia zadané užívateľom vrátane telefónneho zoznamu a zoznamu prijatých hovorov. K dispozícii sú tri úrovne:

- Telefónny zoznam: Vymazanie všetkých uložených čísel v telefónnom zozname, zoznam prijatých hovorov, zoznam zmeškaných a zoznam volaných hovorov.
- Nastavenia: Vymažte default nastavenia.
- Slúchadlo : Kombinácia dvoch predchádzajúcich

Pre vykonanie jednej z troch reset funkcií so slúchadlom v pohotovostnom režime:

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nst. sluchadla**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Vynuluj sluch.**” použitím tlačidla 
- Stlačte “**OK**” (Tlačidlo 1).
- Zadajte PIN kód slúchadla . (Prednastavený PIN je **1590.**)
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte druh resetu a potvrdte tlačidlom **OK** (Tlačidlo 1).

7. Nastavenia základne

Prístup do nastavenia základne

Je možné upraviť funkcionality základne pomocou nasledujúcich postupov:

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Stlačte tlačidlo “**Spet**” (Tlačidlo 2) or pre návrat do predchádzajúceho menu to ra stlačte pre návrat do pohotovostného režimu.

7.1 Nastavenie zvonenia základne

7.1.1 Nastavenie melódie zvonenia

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Zvonenie zakl.**” použitím tlačidla
- Stlačte “**OK**” key (Soft key 1).
- Vyberte “**Zvonenie**” použitím tlačidla .
- Stlačte “**OK**” (Tlačidlo 1)
- Vyberte tón z “**Zvonenie 1**” až “**Zvonenie 9**” použitím tlačidla
- Stlačte **OK** (Tlačidlo 1) pre potvrdenie.

7.1.2 Nastavenie hlasitosti

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Zvonenie zakl.**” použitím tlačidla
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Hlasitost**” použitím tlačidla .

- Stlačte “**OK**” key (Tlačidlo 1)
- The display will show the previously stored volume level.
- Vyberte tón z “**Hlasitost 1**” až “**Hlasitost 9**” použitím tlačidla 
- Stlačte **OK** (Tlačidlo 1) pre potvrdenie

7.1.3 Režim vyzváňania

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Rezim vyzv.**” použitím tlačidla .
- Stlačte “**OK**” (Tlačidlo 1)
- Vyberte položky a stlačte “**OK**” (Tlačidlo 1) pre výber.
- Sú tam tri možnosti: “**Standard**”, “**Vypnute**”, “**Zvonit po**”
- Vyberte “**Standard**” pre zapnutie štandardného vyzváňacieho tónu.
- Alebo vyberte “**Vypnute**” pre zablokovanie vyzváňacieho tónu.
- Alebo vyberte “**Zvonit po**” pre výber vyzváňania poprvom až štvrtom zvonení a stlačte tlačidlo “**OK**” (Tlačidlo 1). Vyzváňanie k dispozícii po výbere počtu zvonení.

7.2 Automatická pauza pre spojenie PBX

Ak je telefón pripojený na PBX je možné nastaviť prístupový kód pre externú linku (obyčajne 0 až 9). To umožňuje zadanie pauzy medzi prístupovým kódom a vlastným telefónnym číslom.

Pri aktivácii:

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Auto pauza**” použitím tlačidla 
- Stlačte “**OK**” (Tlačidlo 1)
- Vložte PBX prístupový kód (1číslicu) after “**Externe cislo pristupu:**”.
- Stlačte **OK** pre potvrdenie.

Pre deaktiváciu automatickej pauzy:

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Auto pauza**” použitím tlačidla 
- Stlačte “**OK**” (Tlačidlo 1)
- Stlačte “**Vymazat**” (Tlačidlo 2) pre vymazanie PBX prístupového kódu (1číslica) po “**Externe cislo pristupu:**”
- Stlačte “**OK**” (Tlačidlo 1) pre potvrdenie a automatická pauza je zablokovaná.

Upozornenie: Ak je nastavená automatická pauza, telefónne čísla v telefónnom zozname a v zozname prijatých hovorov majú funkciu pauza automaticky.

7.3 Odhlásenie slúchadla zo základne

Slúchadlo prihlásené na základňu môžete odhlásiť nasledujúcim postupom:

- Stlačte **Menu** (Tlačidlo 1) a vyberte "**Nastavenia zakl.**".
- Stlačte "**OK**" (Tlačidlo 1).
- Vyberte "**Sluch. vypnute**" použitím tlačidla 
- Stlačte "**OK**" (Tlačidlo 1).
- Potom sa objaví " **PIN zakladne:_**"
- Vložte PIN kód (default 1590). Použite **Vymazat** (Tlačidlo 2) pre zmazanie zle voženého kódu.
- Stlačte "**OK**" (Tlačidlo 1)
- Choose the handset number using key.
- Potom sa objaví "**Vypnut sluchadlo ?**"
- Stlačte **OK** (Tlačidlo 1) pre potvrdenie.

7.4 Zmena PIN základne

Zmena PIN kódu základne môže byť užitočná pre ochranu dôležitých nastavení základne. Prednastavený PIN (Personal Identity Number) je 1590.

- Stlačte **Menu** (Tlačidlo 1) a vyberte "**Nastavenia zakl.**".
- Stlačte "**OK**" (Tlačidlo 1).
- Vyberte "**Zmenit PIN**" použitím tlačidla 
- Stlačte "**OK**" (Tlačidlo 1).
- Potom sa zobrazí na displeji " **PIN zakladne:_**"
- Vložte PIN.
- Stlačte "**OK**" (Tlačidlo 1)

- Ak PIN nie je správny na displeji sa zobrazí “**Nespravny PIN**”.
- Potom sa zobrazí na displeji “**Novy PIN:_**”
- Vložte nový PIN.
- Stlačte “**OK**” (Tlačidlo 1).
- Potom sa zobrazí na displeji “**Zopakuj PIN:_**”
- Vložte nový PIN znova.
- Stlačte “**OK**” (Tlačidlo 1) pre potvrdenie.

7.5 Blokovanie hovorov

Blokovať je možné až 5 predvolieb s dĺžkou 5 číslic. Je možné zadať číslo a slúchadlo z ktorého budú hovory blokované.

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Blokovanie hov.**” použitím tlačidla 
- Stlačte “**OK**” (Tlačidlo 1).
- Potom sa zobrazí na displeji “ **PIN zakladne:_**”
- Vložte PIN.
- Stlačte “**OK**” (Tlačidlo 1).
- Potom sa zobrazí na displeji “**Prefix 1:_**”

Upozornenie: Po vynulovaní zoznamu blokovaných čísel a potvrdení tlačidlom **OK** bude funkcia blokovania deaktivovaná a displeji sa zobrazí “*Blokovanie vypnute*”.

- Zadajte nové blokované číslo, alebo použite tlačidlo  pre vyhľadanie ďalšej blokovanej skupiny a zadajte konkrétne číslo.
- Po úprave blokovaných čísiel potvrdte tlačidlom **OK**. Displej zobrazí “Sluchadlo 1” , alebo zvolené iné číslo slúchadla.

- Vyberte slúchadla ktoré budú uzamknuté pre daný prefix pomocou tlačidla .
- Potvrdte tlačidlom “**OK**” (Tlačidlo 1) .
- Na displeji sa zobrazí “**Zapis ulozeny**” a funkcia blokovania je nastavená a aktívna, na zadané prefixy nebude možné volať.

7.6 Vynulovanie základne

S touto operáciou je možné nastaviť pôvodné nastavenia, vrátane PIN, ktoré je prednastavené na “1590”.

***Upozornenie*: Pri tomto postupe sa na základni vynulujú aj nastavenia prihlasovania slúchadiel.** (na displeji sa zobrazí “*Nepodporovane*”). Pre priradenie slúchadiel bude nutné zopakovať postup pre prihlásenie slúchadla.

- Stlačte **Menu** (Tlačidlo 1) a vyberte “**Nastavenia zakl.**”.
- Stlačte “**OK**” (Tlačidlo 1).
- Vyberte “**Nulovanie zakl.**” použitím tlačidla .
- Stlačte “**OK**” (Tlačidlo 1).
- Potom sa ukáže na displeji “ **PIN zakladne:_**”
- Vložte PIN.
- Stlačte “**OK**” (Tlačidlo 1)
- Ak PIN nieje správny, na displeji sa zobrazí “**Nespravny PIN**”.
- Potom sa ukáže na displeji “**Vynulovat zakl.?**”
- Stlačte “**OK**” (Tlačidlo 1).
- Po niekoľkých sekundách “**Nepodporovane**” sa na slúchadle opäť zobrazí.

8. Diár

8.1 Nastavenie funkcií

- Stlačte **Menu** (Tlačidlo 1).
- Vyberte “**Diar**” použitím tlačidla .
- Potom “**Stretnutie nezadane**” sa zobrazí na displeji
- Stlačte “**Nastavit**” (Tlačidlo 1).
- Vyberte jedno z “**Rocny**”, “**Mesacny**” and “**Denny**”.
- Nastavte dátum a čas.
- Rocny: deň/mesiac a čas
- Mesacny: deň a čas
- Denny: čas
- Stlačte “**OK**” (Tlačidlo 1).
- Vložte text funkcie. Každé tlačidlo má viac znakov, podrobne špecifikované v tabuľke znakov.
- Po vložení znaku počkajte chvíľu pred vložením ďalšieho znaku.
- Počas vkladania znaku stlačte “**Vymazat**” (Tlačidlo 2) pre zmazanie posledného znaku.
- Stlačte “**OK**“ (Tlačidlo 1).
- Stlačte “**Povolit**“ (Tlačidlo 2) zapnúť funkcie.
- Stlačte  pre opustenie menu.

8.1.1 Zmena času udalosti

- Stlačte **Menu** (Tlačidlo 1) .
- Vyberte udalosť použitím tlačidla 
- Stlačte “**OK**“ (Tlačidlo 1)
- Potom bude zobrazené aktuálne nastavenie funkcií .
- Stlačte “**Nast.**“ (Tlačidlo 1).
- Vyberte položku “**Zmen datum**”.

- Stlačte "**OK**" (Tlačidlo 1).
- Potom sa zobrazí aktuálny dátum a čas.
- Zmeňte dátum a čas.
- Stlačte "**OK**" (Tlačidlo 1) pre potvrdenie.

8.1.2 Zmena názvu udalosti

- Stlačte **Menu** (Tlačidlo 1).
- Vyberte udalosť použitím tlačidla 
- Stlačte "**OK**" (Tlačidlo 1)
- Potom bude zobrazené aktuálne nastavenie funkcií.
- Stlačte "**Nast.**" (Tlačidlo 1).
- Vyberte položku "**Zmen text**".
- Stlačte "**OK**" (Tlačidlo 1).
- Zobrazi sa "**Text diaru:**" .
- Zmeňte text.
- Stlačte "**OK**" (Tlačidlo 1) pre potvrdenie.

8.1.3 Vymazanie funkcií

- Stlačte **Menu** (Tlačidlo 1).
- Vyberte udalosť použitím tlačidla .
- Stlačte "**OK**" (Tlačidlo 1)
- Potom bude zobrazené aktuálne nastavenie funkcií.
- Stlačte "**Nast.**" (Tlačidlo 1).
- Vyberte položku "**Vymazat**".
- Stlačte "**OK**" (Tlačidlo 1).
- Potom "**Vymazat stretnutia?**" je zobrazené.
- Stlačte "**OK**" (Tlačidlo 1) pre potvrdenie a potom aktuálne nastavenie funkcií je zmazané.

8.1.4 Náhľad udalosti

- Stlačte **Menu** (Tlačidlo 1).
- Vyberte udalosť použitím tlačidla  .
- Stlačte "**OK**" (Tlačidlo 1)
- Potom bude zobrazené aktuálne nastavenie funkcií .
- Stlačte "**Nast.**" (Tlačidlo 1).
- Vyberte položku "**Nahlad textu**".
- Stlačte "**OK**" (Tlačidlo 1).
- Potom je text zobrazený.

8.1.5 Pripomienka udalosti

- Text udalosti sa zobrazi na displeji v case udalosti a zvuk upozorni na udalost..
- Ak si chcete pripomenúť opäť udalosť, stlačte "**Pripom. za**".
- Zadajte počet minút. Udalosť je po tomto čase opäť pripomenutá.
- Stlačte "**OK**" (Tlačidlo 1) pre potvrdenie.

Záručný list

Vážený zákazník,

ďakujeme Vám za dôveru, ktorú ste nám preukázali kúpou, alebo zapožičaním telefónu H3000. Získali ste kvalitný prístroj, ktorý bude pri správnom používaní dlhodobo spoľahlivo slúžiť.

Ak budete potrebovať radu alebo pomoc, naši technici sú Vám k dispozícii od 8:00 do 16:30 na telefónnom čísle 055/ 6234400. Kontakt možno taktiež nadviazať na e-mailovej adrese: info@antiktech.sk. Naši technickí pracovníci Vám poradia, prípadne odporučia doručiť Váš prístroj do servisného strediska na adrese:

Antik Technology

Čárskeho 10

040 01 Košice

Záručné podmienky:

1. Záruka sa vzťahuje na bezporuchovú prevádzku telefónu, ako aj jeho príslušenstva v trvaní dvadsaťštyri (24) mesiacov. Napájací zdroj, slúchadlo a slúchadlový kábel sú štandardne dodávané príslušenstvo k telefónu. Záručná doba začína plynúť dňom prevzatia telefónu a príslušenstva kupujúcim. Dátum musí byť vyznačený na záručnom liste.

2. Záruka bude uznaná, iba ak k tomuto úplne a riadne vyplnenému záručnému listu bude priložený doklad o zaplatení.

3. Záruka je neplatná, ak typ výrobku alebo výrobné číslo bolo zmenené alebo odstránené.

4. V prípade uplatnenia záručnej opravy príslušenstva, ktoré bolo inštalované, bude záruka uznaná, len ak kupujúci zároveň predloží Zmluvu o poskytovaní Verejnej telefónnej služby Antik.

5. Záruka sa nevzťahuje na chyby zapríčinené:

- používaním výrobku, ktoré je v rozpore s návodom na obsluhu
- mechanickým poškodením
- kontaktom výrobku s vodou či inými tekutinami, ktoré vtiekli do vnútra
- opravou vykonanou neautorizovaným servisným strediskom
- nevhodným skladovaním a používaním mimo tepelného rozsahu uvedenom v návode na obsluhu
- skladovaním a používaním výrobku vo vlhkom, prašnom, chemicky alebo ináč agresívnom prostredí - oxidácia

Záruka sa nevzťahuje na poruchy vzniknuté:

pri živelných pohromách.

6. Za chybu predávanej veci sa považujú nedostatky jej vlastností alebo prejavu, ktoré najmä vzhľadom na obsah zmluvy o predaji v obchode alebo vyhlásenie predávajúceho o zaručených vlastnostiach, alebo vzhľadom na ustanovenia právnych predpisov, či technických noriem by mala predávaná vec mať. Za chybu veci sa považuje aj nedostatok vlastnosti alebo prejavu, ktoré sa pri veciach tohto druhu predávaných v obchode všeobecne predpokladajú. Záruka sa nevzťahuje na bežné opotrebovanie výrobku vzniknuté v dôsledku jeho používania.

7. Ak ide o chybu, ktorú možno odstrániť, má kupujúci právo, aby bola bezplatne odstránená. Kupujúci môže namiesto odstránenia chyby požadovať výmenu veci, alebo ak sa chyba týka len súčasti veci, výmenu súčasti, iba vtedy, ak tým predávajúcemu nevzniknú neprimerané náklady vzhľadom na cenu tovaru alebo závažnosť poruchy.

8. Doba od uplatnenia práva zo zodpovednosti za chyby až do doby, keď kupujúci po skončení opravy bol povinný vec prevziať, sa do záručnej doby nepočíta.

Na tento prístroj sa poskytuje záruka po dobu dvadsaťštyri (24) mesiacov odo dňa jeho prevzatia kupujúcim.

Záruka sa uplatňuje u predajcu.

Typ prístroja ....

(vyplní predajca)

Dátum predaja ....

(vyplní predajca)

Pečiatka a podpis predajcu:

Záznam servisného strediska o vykonaní záručných opráv:

Ref. číslo opravy	Dátum príjmu	Dátum opravy	Nové výrobné číslo	Pečiatka a podpis servisu
Ref. číslo opravy	Dátum príjmu	Dátum opravy	Nové výrobné číslo	Pečiatka a podpis servisu
Ref. číslo opravy	Dátum príjmu	Dátum opravy	Nové výrobné číslo	Pečiatka a podpis servisu
Ref. číslo opravy	Dátum príjmu	Dátum opravy	Nové výrobné číslo	Pečiatka a podpis servisu

Electronic Equipment Manipulation



It is necessary to deliver non-functional, discarded, or worn-out (at your discretion) electronic equipment to places determined for it.

It is necessary to separate electronic equipment from unseparated municipal waste and deliver it bodily (it is understood together with the battery or charger).

Unless old electronic equipment is treated according to the stated points, negative impact on environment and also people's health may occur.

However, if you deliver old electronic equipment to places determined for it, the processer himself guarantees its utilization (material or other), by which means you

also contribute to reutilization of individual part of the electronic equipment and their recycling.

All information in this brochure is abridged under the symbol stated on every electronic equipment.

The purpose of this graphic symbol is based on back removal and separate collection of electronic waste. Do not throw away with municipal waste! It is possible to remove the waste at places determined for it!

Safety notices

To prevent risk of fire, accident, personal injury, or damage to property in using H3000, it is necessary to comply with the following safety instructions:

1. Do not try to open the H3000; if it is necessary to carry out its repair or interference with the H3000, contact the service provider who shall provide the error removal by qualified personnel.

2. Use only approved network adapter for the H3000 power supply.

3. Do not place the telephone H3000 near heat, dust or vibration sources, near water, such as showers, basins, on wet surfaces or at a swimming pool.

4. Handle the telephone H3000 with care; rough handling may cause damage to the H3000 of its malfunction.

5. For cleaning the H3000 do not use aggressive chemicals, detergents containing chemicals, or strong detergents.

6. Do not paint the H3000; the paint may clog moving parts of the H3000 and disable its proper functioning.

7. If any H3000 part is damaged, do not repair the H3000; disconnect the network adapter and immediately contact the service provider.

8. Do not install or use the H3000 during a storm. There is a risk of injury due to electric current.

9. Place the power supply cable with care so that nobody can step on it or tumble over it.

10. Do not use the telephone H3000 in aggressive environment, such as a paint shop.

11. It is necessary to separate non-functional, discarded, or worn-out equipment from municipal waste and deliver it to the service provider who shall provide for free disposal or recycling of non-utilizable H3000 parts.

12. Inform all potential users of the telephone H3000 at the place of its connection with these safety instructions.

1. General description

1.1 Symbols on display

 Hands free mode

 Off hook mode

 Charge status of the battery (Empty, Half, Full)

INT Internal call

EXT External call

 Conference call

 SMS message received (one : new message, two : memory full)

 Alarm set

 Appointment

1.2 Key description



2. Phome usage

Connect battery to the handset correctly. The handset will search for the base station and display “**Searching**”. After searching base, the initial screen is displayed on the LCD.

2.1 Out of range indication

If you go out of base range with the handset during the conversation, it begins to give out an acoustic signal and the conversation will be disturbed. Approach the base in order not to lose the conversation.

If you go out of range in stand-by mode, the display shows “**Range Out**”.

2.2 Make a Call

2.2.1 Manual Call

- When the handset is in stand-by mode, press  key and dial the destination number after hearing the dial tone.
- During the call you can see the call duration time on the display.
- To terminate the call press  key or **End** key (Soft key 2).

2.2.2 Make a call with pre-dialling mode

You can enter the destination number before going to off-hook. With this feature you can reduce the error on the destination number. You can make correction on the destination number if you have a wrong destination number. With the unit in stand-by mode follow this procedure:

- Enter the destination number.
- Press “**Delete**” key (Soft key 2) to erase the last inserted number or press more times to erase more numbers.
- Press  key to erase all the numbers.
- Press  key to start the call.

2.3 Repeat one of the last 10 dialled number

With this function it is possible to dial one of the 10 last dialled numbers.

- With the handset in stand-by mode, press  key: the display shows the last dialled numbers.
- Choose the number using  key.
- Press  key to start the call.
- Press “**Options**” key (Soft key 1).
- Choose “Details” option to see the full dialled numbers.
- Choose “**Save**” option to store the number in the phone book.
- Choose “**Delete**” option to delete the number from performed calls list.
- Choose “**Call**” option to start the call.

2.4 Answer a call

When there is an incoming call, both the base and the handset ring and the “**EXT**” flashes. Press  key or “**Accept**” key (Soft key 1) to answer the call. Press  key or press “**END**” key (Soft key 2) or put the handset on the base to terminate the call after the conversation.

2.5 Call duration time

This function starts after 5 seconds the beginning of conversation and the time display stays for 3 seconds after the call finishes. The time is shown in minutes and seconds.

2.6 Look for handset

In case the user lost handset it is possible to search it, simply push the key on the base: the handset starts ringing for 20 seconds. Push again the same key to stop the ring. When you get the handset, press  key to stop the ring.

2.7 Interdigit pause

During entering a telephone number it is possible to insert 3 seconds of pause between, for example, the prefix and the telephone number to make easier the network connection.

- Enter the prefix.
- Press **Options** key (Soft key 1) and choose the item "Insert *Pause*" or press  key.
- Press "**OK**" key (Soft key 1).

2.8 Adjusting the earpiece volume

It is possible to change the listening volume during the conversation.

During the call:

- Press "**Options**" key (Soft key 1) and then use  key to choose the item "**Ear Volume**".
- Press "**OK**" key (Soft key 1).

- Press  key to set respectively 1(low), 2(medium) or 3(high) level.
- Press “**OK**” key (Soft key 1).

2.9 Microphone muting

During the conversation it is possible to mute microphone. When muting, the handset displays “**Muted**”.

During a call:

- Press “**Options**” key (Soft key 1) and choose the item “**Mute**”.
- Press “**OK** key” (Soft key 1).
- To get out from microphone mute mode, press “**Options**” key (Soft key 1) and choose the item “**Enable Mic**” or press “**Enable**” key (Soft key 2).

2.10 Waiting with on-hold music

During the conversation it is possible to put the other side in a waiting mode. When waiting, the handset displays “**Waiting**” and hold-on music is played through the telephone line.

During a call:

- Press “**Options**” key (Soft key 1) and choose “**Waiting**”.
- Press “**OK**” key (Soft key 1).
- To get out from the “**Waiting**” mode, press “**Options**” key (Soft key 1) and choose “**End Waiting**” and press “**OK**” key (Soft key 1) or press “**Disable**” key (Soft key 2).

2.11 Register Recall

During the external call the user can transfer the call to someone else connected to the same PABX by Register Recall function.

- Press 

key (hold down # key) during external call.
- The base station will then transmit a FLASH signal to the line.

2.12 Internal call between the handsets

In multi-handsets configuration, it is possible to make an internal call between two handsets. With 4 handsets registered on a base you can make 2 internal calls and 1 external call.

To make an internal call:

- Press 

key (hold down * key).
- Choose the handset number using  key.
- Press “**OK**“ key (Soft key 1)
- The called handset begins to ring and flash **INT** icon. Press  key to answer.
- Press  key on both the handsets to close the conversation.

2.13 Call transfer between handsets

To transfer an external call from a handset to another:

- During the call, press “**Options**” key (Soft key 1).
- Choose “**Internal Call**”.
- Press “**OK**“ key (Soft key 1)

Or

- During the call, press  key (hold down * key).

And then

- Select the desired handset number using  key
- Press “**OK**“ key (Soft key 1)
- When the called handset answers, an internal call is started.
- To transfer the external call simply press  key on the calling handset.

2.14 Conference call

An external call can be conferred with another handset during a conversation. Follow the same procedure for Call Transfer except for the last point.

- During the call, press “**Options**” key (Soft key 1).
- Choose “**Internal Call**”.
- Press “**OK**“ key (Soft key 1)

Or

- During the call, press  key (hold down * key).

And then

- Select the desired handset number using  key
- Press “**OK**“ key (Soft key 1)
- When the called handset answers, an internal call is started.
- Press **Options** key (Soft key 1).

- Choose "**Conference**".
- The external call is connected to both of handsets and the conference conversation now is enabled. The display shows .
- A press off  key on one of the two handsets will transfer the call completely to the other handset.

2.15 External call waiting signalling

If there is an external call during an internal conversation, the telephone gives out an acoustic warning on the earpiece and the display will show the item EXT. Finish the internal conversation by press  key and then wait for the ring and press again  key to answer the call.

2.16 Handset Power Off

2.16.1 Power Off

- Press  key for 2 seconds.
- After validation tone, handset is switched off.

2.16.2 Power On

- Press  key for 2 senconds at the power off state.
- The handset search for the base station and display "**Searching**". After searching base, the initial screen is displayed on the LCD.

3. Phone book usage

3.1 Storing an entry

The unit has an alphanumeric phone book (name and number) with 100 memory locations of capacity where can be stored number with up to 25 digits and name with up to 15 characters.

To store an entry in any memory location, follow the next process with the handset in stand-by mode:

- Press "**Ph.Book**" key (Soft key 2) and then use  key to choose the item "**Add Entry**".
- Press "**OK**" key (Soft key 2).
- Enter the new name. Every key have more characters as specified in the following table:

KEY	Number of time to press the key								
	1	2	3	4	5	6	7	8	9
1	@	.	,	?	1	!	-	&	
2	A	B	C	2	a	b	c	à	
3	D	E	F	3	d	e	f	è	é
4	G	H	I	4	g	h	i	ì	
5	J	K	L	5	j	k	l		

6	M	N	O	6	m	n	o	ò	
7	P	Q	R	S	7	p	q	r	s
8	T	U	V	8	t	u	v	ù	
9	W	X	Y	Z	9	w	x	y	z
0		_	£	€	0	$	:	;	

After the character insertion press key or wait 1 second to insert the next character**.** During the character insertion press "**Delete**" key (Soft key 2) to erase the last character.

- Press "**OK**" key (Soft key 1) to enter telephone number.
- Enter the new telephone number.
- Press "**Options**" key (Soft key 1).
- Choose "**Save**" option to save the entry.
- Choose "**Assign tone**" option to assign different ring tone to each entry.

Note: The first letter of the name is written in upper case, the letters afterwards can be written in both capitals and lower-case letters.

The letter to the left of the cursor is deleted with "**Delete**" key (Soft key 2). Letters are always inserted to the left of the cursor.

3.2 Dialling a number from the phone book

- Press “**Ph.Book**” key (Soft key 2) and choose the item “**Find**”.
- Press “**OK**” key (Soft key 2).
- Enter the first letter of the name.
- (e.g. “E” for Emma) : Press 3 key twice and scroll with  key.
- Press “**Find**” key (Soft key 1).
- The names are listed in alphabetical order.
- Press  key or **Call** key.
- The number is dialled.

3.3 Displaying an entry

- Press “**Ph.Book**” key (Soft key 2) and choose the item “**Find**”.
- Press “**OK**” key (Soft key 1).
- Press “**Find**” key (Soft key 1).
- Select the required entry.
- Press “**Options**” key (Soft key 1) and choose the item “**View**”.
- Press “**OK**” key (Soft key 1).
- The number and information (EXT/INT, VIP) are displayed.

3.4 Deleting an entry

- Press “**Ph.Book**” key (Soft key 2) and then use  key to choose the item “**Delete**”.
- Press “**OK**” key (Soft key 1) and then you can select “**One by one**” or “**Delete All**”.
- Select “**One by one**” option to delete the required entry.
- Press “**Find**” key (Soft key 1).
- Select the required entry.
- Press “Delete” key (Soft key 1) to delete the selected entry.
- Select “**Delete All**” option to delete all the entry. Then “Delete entire phone book?” will show.

- Press “**OK**” key (Soft key 1) to confirm.

3.5 Changing an entry

- Press **Ph.Book** key and then choose the item “**Modify**” using key .
- Press “**OK**” key (Soft key 1).
- Press “**Find**” key (Soft key 1).
- Choose the required entry.
- Press “**OK**” key (Soft key 1).
- If necessary, change the name.
- Press “**OK**” key (Soft key 1).
- If necessary, change the telephone number.
- Press “**Options**” key (Soft key 1) and choose the item “**Save**”.
- Press “**OK**” key (Soft key 1) to confirm.

4. Text messages (SMS)

The phone allows to send and receive text messages (SMS messages) if the function is enabled. To go to the SMS mode press “**Menu**” key (Soft key 1) in stand-by mode and choose the “**Messages**”. During the usage of the SMS menu press “**Back**” key (Soft key 2) or  key to return to the previous menu and press and hold down  key to exit directly from the menu and return to stand-by mode.

The maximum length of an SMS message is 160 characters.

SMS : **S**hort **M**essage **S**ervice

4.1 SMS

4.1.1 Writing and sending a message

- Press “**Menu**” key (Soft key 1)
- Choose “**Messages**” icon.
- Press “**OK**” key (Soft key 1).
- Choose “**Write**” using  key.
- Press “**OK**” key (Soft key 1).
- “Text:_” will show on the display.
- Enter characters. Every key has additional characters as specified in the **table of below:**

Key	Number of time to press the key 1	2	3	4	5	6	7	8	9
1	.	,	?	!	1	-	@	&	
2	A	B	C	2	a	B	c	A	
3	D	E	F	3	d	E	f	È	é
4	G	H	I	4	g	H	i	ì	
5	J	K	L	5	j	K	l		
6	M	N	O	6	m	N	o	ò	
7	P	Q	R	S	7	P	q	r	s
8	T	U	V	8	t	U	v	ù	
9	W	X	Y	Z	9	W	x	y	z
0	SP	_	£	€	0	$	:	;	
*****	*	+	=	/	%				
#	#	(	)	<	>	“	‘		

Note: SP is the character “Space”

- After the character insertion, wait 1 (one) second to insert the next character with same key**.**
- At the end of text,  key is the character “Space”.
- During the character insertion press “**Delete**” key (Soft key 2) to erase the last character.
- Use  key to move the cursor and use “**Delete**” key (Soft key 2) to erase any character. At this time the left character of cursor is deleted.
- Press “**Options**” key (Soft key 1) after writing the text.

Note : when you are going to write a new message and the “**Memory Full**” is displayed, you have to delete a message in the personal messages list to acquire room.

4.1.1.1. Options SMS

- Select “**Send**” and press “**OK**” key (Soft key 1) to go to the “**Sending Options**”
- Select “**Save**” and press “**OK**” key (Soft key 1) to store the SMS in the Personal SMS list to send it later if you like.
- Select “**Delete Text**” and press “**OK**” key (Soft key 1) to delete all written text.

4.1.1.2 Sending Options

- Select “**Send to one**” and press “**OK**” key (Soft key 1): “**Phone number:** “ is displayed. Refer to article 4.1.1.3.
- Select “**Send to many**” and press “**OK**” key (Soft key 1): It is multiple sending. You can send the message to up-to 5 people. Refer to article 4.1.1.3.
- Select *“***Terminal Nr.***”* and press “**OK**” key (Soft key 1): Select the desired destination terminal number (1~9).

- Select *“***Notification***”* and press “**OK**” key (Soft key 1) to request the notification of the message delivery.

4.1.1.3 Entering Phone number

- “**Phone number:**” is displayed.
- Enter the recipient’s telephone number manually.
- Or press “**Options**” key (Soft key 1) and choose “**Phone Book**” to recall the recipient’s telephone number from the directory.
- Or press “**Options**” key (Soft key 1) and choose “**Received Calls**” to recall the recipient’s telephone number from the Received Call list.
- In the multiple sending, you can enter the recipient’s telephone number up-to 5 using  key.
- Press “**Send**” key (Soft key 1) to send the message immediately.
- The display will show “**Sending...**” and if the message is sent successfully, the display will show “**Message sent save ?**“. If you want to store the message press “**OK**” key (Soft key 1). If you do not want to store the message press “**NO**” key (Soft key 2).
- *Note*: If the message sending is failed, the display will show “**Sending failed Save ?**“. If you want to store the message press “**OK**” key (Soft key 1). If you do not want to store the message press “**NO**” key (Soft key 2). In the multiple sending, the display will show “**Sending failed Retry ?**“. If you want to retry the message press “**OK**” key (Soft key 1).

4.1.2 Incoming Messages list

The arrival of SMS message is signalled with the display ">>> *SMS* <<<". After phone received message, ✉ icon and "SMS received" is displayed to signal new message.

To read new messages:

- Press "**View"** key (Soft key 1). The telephone number of the latest message is displayed.
- If you want to return to the standby mode press "**Esc**" key.
- If there are more received messages, it is possible to look through these using key.
- Press "**OK**" key (Soft key 1) to read the text of the message.

To check messages:

- Press key and to display "**Received SMS**".
- Press "**OK**" key (Soft key 1): the telephone number of the latest message is displayed.
- If there are more received messages, it is possible to look through these using key.
- Press "**OK**" key (Soft key 1) to read the text of the message.
- **The max.18 short messages can be stored in the received messages list.**

4.1.2.1 Deleting the received message

When the ✉ icon and "**No room for new SMS**" is displayed, it means that the phone can not receive any new message because the memory is full. This can happen when there are 18 SMS messages (160 characters) in the received message list or when the text is bigger than the free memory

space. In both case you need to erase one or more messages which are stored in this list.

To erase a message:

- Press “**Options**” key (Soft key 1) and choose “**Delete**” .
- Press “**OK**” key to confirm. “**Message deleted**” is displayed and the message will be erased.

4.1.2.2 Replying to the sender

- Press “**Options**” key (Soft key 1) and choose “**Reply**”.

Choosing the “**Reply”** mode, it is possible to write a reply message that will be sent to the sender of the received message. The phone will get ready to write a new message. To write and send the message look the “**Writing and Sending a message**” section with the only difference that you do not need to insert the destination number because this message will be sent to the sender of the received message.

4.1.2.3 Forwarding to the other person

- Press “**Options**” key (Soft key 1) and choose “**Forward**”.

Choosing the “**Forward**” mode, it is possible to forward a received message to the other person. The phone will get ready to write a new phone number. To send the message, look the “Writing and Sending a message” section with the only difference that you do not need to edit the text.

4.1.2.4 Modifying the received message

- Press “**Options**” key (Soft key 1) and choose “**Modify**”.
- Choosing the “**Modify**” mode it is possible to modify a received message to send to the sender or to a new destination number.
- When the display shows the selected message:
- Use  key to look through the character of the message (the character is highlighted by cursor).
- Use “**Delete**” key (Soft key 2) to erase the undesired character.
- Insert or add a new text.

To send the message, look the “**Writing and Sending a message**” section with the only difference that you modify the original text.

4.1.2.5 Details of the received message

- Press “**Options**” key (Soft key 1) and choose “**Details**” . To check sender’s phone number and the date of the message.

4.1.2.6 Saving Number in the Phone book

- Press “**Options**” key and choose “**Save number**”.
- Enter the Name.
- Press “**OK**” key to confirm. The phone number of sender is stored in the Phone book.

4.1.3 Personal Messages list

All the sent and saved messages (max. 18 short messages) can be recalled from the memory.

- Choose “**Personal SMS**” using  key.
- Press “**OK**” key (Soft key 1). The display will show the text of the last stored message.
- If there are more personal messages, it is possible to look through these using  key.
- Press “**OK**” key (Soft key 1) to read the text of the message.

4.1.3.1 Deleting a message

When the memory is full or more space in the memory is required, you can delete a message.

To erase a message:

- Press “**Options**” key and choose “**Delete**”.
- Press “**OK**” key (Soft key 1) to confirm: “Message deleted” is displayed and the message will be erased.

4.1.3.2 Sending a message

This option allows you to resend a stored message.

- Press “**Options**” key and choose “**Send**”.
- it is possible to send a stored message again. The phone will get ready to write a new phone number. To send the message, refer to the “**Writing and Sending a message**” section.

4.1.3.3 Modifying a message

It is possible to modify the stored message and send this.

- Press “**Options**” key (Soft key 1) and choose “**Modify**”.
- When the display show the selected message:
- Use  key to look through the character of the message (the character is highlighted by cursor).
- Use “**Delete**” key (Soft key 2) to erase the undesired character.
- Insert or add a new text.

To send the message, look the “**Writing and Sending a message**” section with the only difference that you modify the original text.

4.1.3.4 Details

- Press “**Options**” key (Soft key 1) and choose “**Details**” .
- to the check destination phone number and terminal number and the date of the message.

4.1.4 Delete All

You can delete all received SMS messages and personal SMS messages

- Use  key and to display “**Delete All**”.
- Press “**OK**” key (Soft key 1)>

4.1.4.1 Delete all received SMS

- Use  key to display “**Received SMS**”.
- Press “**OK**” key (Soft key 1). The display will show “**Delete all received SMS ?**”

- Press “**OK**” key (Soft key 1) to confirm. “**Received SMS deleted**” is displayed and all received SMS messages will be deleted.

4.1.4.2 Delete all personal messages

- Use  key to display “**Personal SMS**”.
- Press “**OK**” key: the display will show “**Delete all personal SMS?**”
- Press “**OK**” key (Soft key 1) to confirm: “**Personal SMS deleted**” is displayed and all personal messages will be deleted.

4.2 Settings

4.2.1 Enabling the SMS function

- Press **Menu** key (Soft key 1) and choose “**Messages**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Settings**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**SMS Service**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “*Enabled*” and “*Disabled*” using  key.
- Press “**OK**” key (Soft key 1) to confirm.
- Note: If the SMS function is not active, when you try to enter SMS mode, the first item will be “*SMS Service*”.

4.2.2 SMS service centre

To send and receive SMS you need the telephone number of service provider’s SMS centre.

- Press **Menu** key (Soft key 1) and choose “**Messages**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Settings**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Service Centre**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose the “**Serv. Centre 1**” or “**Serv. Centre 2**” using  key.
- Press “**OK**” key (Soft key 1).
- Enter the service centre’s phone number.
- SMS Center 1 : The number of SMS center 1 is always used when sending a SMS.
- SMS Center 2 : The number of SMS center 2 is always used when receiving a SMS.
- Press “**OK**” key (Soft key 1) to confirm.

4.2.3 Setting the terminal number

If it is required to connect on the line more SMS phones, you need to specify each SMS phone with the different terminal number from 0 to 9.

It is possible to subscribe up to 5 handsets to the same base. You can assign different terminal number to each handset. To set the terminal number with the phone in stand-by mode:

- Press **Menu** key (Soft key 1) and choose “**Messages**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Settings**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Terminal Nr.**” using  key.
- Press “**OK**” key (Soft key 1).
- Press “**OK**” key (Soft key 1) and use  key to choose the terminal number (0~9).
- Press “**OK**” key (Soft key 1) to confirm.

5. Call list usage

5.1 Received calls list (CLID)

The phone allows the use of “CLID’” service that shows on the display the name of the calling party when there is a received call or when there is a “waiting call” during a conversation. When there is an incoming call, after the first ring, the calling name is shown on the display. If the received telephone number exists in the phone book, the stored name is displayed.

5.1.1 Displaying an entry

The numbers related to the last 20 incoming calls are stored into the phone.

- Press “**Menu**” key (Soft key 1)
- Choose “**Call List**”
- Press “**OK**” key (Soft key 1).
- Choose “**Received**”.
- Press “**OK**” key (Soft key 1).
- Choose the received call nos. using  key.
- Press **Options** key.
- Choose “**Details**” option to show the information regarding the date and time and the telephone number of received call.
- Choose “**Save**” option to store this entry to phone book.

- Choose “**Delete**” option to delete the entry from received calls list.
- Choose “**Call**” option to start the call.

5.2 Missed calls list

Your handset automatically saves the last 20 missed numbers.

After a call is missed, the display will be shown “**N Received calls**” (N is the number of the missed calls).

- To show the missed calls list press “**View**” key (Soft key 1) or go to “**Call List**” Menu.
- Choose “**Missed**”.
- Press **Options** key.
- Choose “**Details**” option to show the information regarding the date and time and the telephone number of missed call.
- Choose “**Save**” option to store this entry to phone book.
- Choose “**Delete**” option to delete the entry from missed calls list.
- Choose “**Call**” option to start the call.

5.3 Dialled calls list

Your handset automatically saves the last 10 dialled numbers.

- To show the dialled calls list, press  key or go to “**Call List**” Menu.
- Choose “**Dialled**”.
- Press “**OK**” key (Soft key 1).
- Choose the received call nos. using  key.

- Press **Options** key.
- Choose “**Details**” option to show the information regarding the date and time and the telephone number of dialled call.
- Choose “**Save**” option to store this entry to phone book.
- Choose “**Delete**” option to delete the entry from dialled calls list.
- Choose “**Call**” option to start the call.

5.4 Delete Call List

5.4.1 Delete “Received Calls”

- Press **Menu** key (Soft key 1) and choose “**Call List**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Delete All**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Received Calls**” using  key.
- Press “**OK**” key (Soft key 1).
- The display shows “**Delete all received calls**?”
- Press “**OK**” key (Soft key 1) to confirm.

5.4.2 Delete “Missed Calls”

- Press Menu key (Soft key 1) and choose “Call List”.
- Press “OK” key (Soft key 1).
- Choose “Delete All” using  key.
- Press “OK” key (Soft key 1).
- Choose “Missed Calls” using  key.
- Press “OK” key (Soft key 1).
- The display shows “Delete all missed calls?”
- Press “OK” key (Soft key 1) to confirm.

5.4.3 Delete “Dialled Calls”

- Press Menu key (Soft key 1) and choose “Call List”.
- Press “OK” key (Soft key 1).
- Choose “Delete All” using  key.
- Press “OK” key (Soft key 1).
- Choose “Dialled Calls” using  key.
- Press “OK” key (Soft key 1).
- The display shows “Delete all dialled calls?”
- Press “OK” key (Soft key 1) to confirm.

5.4.4 Delete “All Calls”

- Press Menu key (Soft key 1) and choose “Call List”.
- Press “OK” key (Soft key 1).
- Choose “Delete All” using  key.
- Press “OK” key (Soft key 1).
- Choose “All Calls” using  key.
- Press “OK” key (Soft key 1).
- The display shows “Delete all calls?”
- Press “OK” key (Soft key 1) to confirm.

6. Handset setting

Using the following operation it is possible to customize the handset's functionality.

To access the handset setting menu, press "**Menu**" key (Soft key 1) and choose "**H/Set Setting**" using  key. Press "OK" key (Soft key 1)

Press "**Back**" key (Soft key 2) or  key to return to the previous menu and press  key to return to stand-by mode.

6.1 Infrared Remote Control

This function enables you to use the handset as a universal infrared remote control. In fact you can control the main functions of up to 4 different infrared-controlled appliances: a television set TV, Set-Top Box, Audio and VCR.

Before using the infrared control feature, you must program the handset in order to send the same infrared commands of the original remote control(s) as stated in the following paragraph.

If you don't program at least one profile (e.g. TV), you can't go in remote control mode.

6.1.1 Learning the infra red code (any appliances)

With this procedure you can instruct your handset to separately learn the commands of each keys directly from your genuine remote control. If you need to program your handset with TV, Set-Top Box, Audio and VCR

Follow these steps:

- Place both the handset and the original remote control on a flat and stable surface, then point their two infra red windows face to face in order to allow them communicating. Put them in close distance (less than 2 cm) and don't move them.
- From the stand by mode press the "**MENU**" soft key.
- Press the navigation keys to reach the menu "**H/S Settings**", then press the "**OK**" soft key.
- Press the navigation keys to reach the menu "**Remocon**".
- Press the "OK" soft key in order to select "**Remocon**".
- Press the navigation keys to reach the menu "**IR Progam**".
- Press again the "**OK**" soft key in order to select "**IR Program**" (Infra red programming mode). You will see the list of the appliances to be programmed in the handset (TV, Set-Top Box, Audio and VCR)
- Press the navigation keys to reach the appliance you'd like to program (TV, Set-Top Box, Audio and VCT), then press the "**OK**" soft key.
- You will see **Learning** window with the **Press a Key** (empty) field.
- Press the handset key that will have to learn the relevant control from the related key of the original controller's command according to this **table (see note):**

HANDSET KEY	ORIGINAL CONTROLLER'S KEY
# key	Power on/off
0 key	For **Audio**, **VCR** : Stop For **TV**, **Set-Top Box** : Digit 0
Left soft key	For **Audio**, **VCR** : Play For **TV**, **Set-Top Box** : Mute
	Channel up
	Channel down
	Volume down
	Volume up
1 - **9**	For **TV**, **Set-Top Box** : Digit 1 ~ Digit 9

- Press the relevant key of the original control for about 1 second (see note). The handset will inform you whether it successfully learnt the function correctly or not respectively with the messages "Success! or Fail! (see note).
- Repeat steps 10 and 11 for each of the required keys.
- Note:
- Don't shake or move the handset or the remote control during this procedure. Keep their position stable.
- Some remote controls require different times for properly sending the commands to the handset, so at step 11 you can try pressing the button with different times (shorter or longer than 1 second).
- If you can't learn any of the commands, try to slightly skew the position of the two windows as shown and try again.





6.1 .2 Deleting Codes

You can delete one or all profiles according to your needs.

6.1.2.1 Deleting one profile

- From the stand by mode press the “**MENU**” soft key.
- Press the navigation keys to reach the menu “**H/S Settings**”, then press the “**OK**” soft key.
- Press the navigation keys to reach the menu “**Remocon**”.
- Press the “OK” soft key in order to select “**Remocon**”.
- Press the navigation keys to reach the menu “**Delete**”.
- Press again the “**OK**” soft key in order to select “**Delete**”. You will see the list of the profiles you want to delete in the handset (TV, Set-Top Box, Audio and VCR)
- Press the navigation keys to reach the profile you want to delete (TV, Set-Top Box, Audio and VCT), then press the “**OK**” soft key.
- The handset will show you the message” **Confirm?**”.
- Press “**OK**” soft key to confirm the deletion or “**BACK**” soft key to exit.

6.1.2.2 Deleting all profiles

- From the stand by mode press the “**MENU**” soft key.
- Press the navigation keys to reach the menu “**H/S Settings**”, then press the “**OK**” soft key.
- Press the navigation keys to reach the menu “**Remocon**”.
- Press the “OK” soft key in order to select “**Remocon**”.
- Press the navigation keys to reach the menu “**Delete All**”.
- Press again the “**OK**” soft key in order to select “**Delete All**”, then press the “**OK**” soft key.
- The handset will show you the message” **Confirm?**”.

- Press “**OK**” soft key to confirm the deletion or “**BACK**” soft key to exit.

6.1.3 Using the remote control function

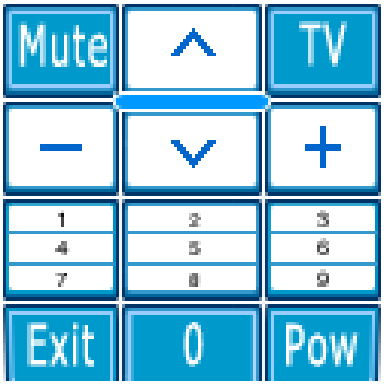
If you have successfully programmed at least one profile (e.g. TV) in the handset, you can now use it to control your appliances with the remote control mode (see note).

While in remote control mode, the handset will not automatically return to stand by mode. If the power save feature is set, the display will fully dim after 10 seconds from the last pressed key. It will resume to full backlight at the first touch of any key.

Should you receive a call in remote control mode, the handset will automatically return in phone mode to give you the possibility to answer the incoming phone call. After the end of the call, the handset will return to the remote control mode.

To use the remote controller:

- In stand by mode, simply press and hold the “1” key more than 1sec to activate the remote control function. If you have programmed at least one profile (e.g. TV), the display will show a virtual multifunction infrared controller. As follows:

 TV	 AUDIO

- Choose the appliance to control by pressing the right soft key. You will notice the top-right small box showing all the programmed appliances as follows:
  - **TV** shows the profile **TV**
  - **STB** shows the profile **Set-Top Box**
  - **AUD** shows the profile **Audio**
  - **VCR** shows the profile **VCR**

Now, if you had properly programmed your handset. You will be able to control your appliance according to the table stated on par. 6.1.1.

6.2 Keypad lock

Setting the keypad lock, the handset is not possible to make a call but is possible to receive a call. This function is useful to avoid unintentional key press or unable the use of the phone to anybody who does not know the PIN code of the handset.

To set the lock:

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Keypad Lock**” using  key.
- Press “**OK**” key (Soft key 1).
- Insert the PIN code of the handset (default on production 1590).
- Use “**Delete**” key (Soft key 2) to erase wrong PIN code.
- Press “**OK**” key (Soft key 1) to confirm.
- “***Keypad Lock***” will show at the stand-by mode.

To unlock the handset and return to the normal functionality:

- Press “**Unlock**” key (Soft key 2).
- “**Unlock keypad?**” will show.
- Press “**OK**” key (Soft key 1) and insert the PIN code of the handset (default on production 1590).
- Use **Delete** key to erase wrong PIN code if you mistake.
- Press “**OK**” key (Soft key 1) to confirm and exit from the menu.
- To customize the PIN code of the handset look the related paragraph.

6.3 Setting the Clock

- You need to set the date and time and clock mode is 24 h display.
- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Clock**” using  key.
- Press “**OK**” key (Soft key 1).
- Enter the day/month/year.
- Press “**OK**” key (Soft key 1).
- Enter the hours/minutes.
- Press **OK** key to confirm and exit.
- The date and the time appear on the display in the idle mode, but year doesn’t appear.

6.4 Setting the alarm clock

You can use your handset as alarm clock.

6.4.1 Activating the alarm clock

The active alarm clock rings every day at the time entered. If you set a time for the alarm, this is indicated by the  icon in the display.

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Alarm Clock**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Yes**” using  key.
- Press “**OK**” key (Soft key 1).
- Enter the hours/minutes.
- Press “**OK**” key (Soft key 1) to confirm and exit.

6.4.2 Deactivating the alarm clock

The alarm clock is set but you do not want it to ring every day.

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Alarm Clock**” using key.
- Press “**OK**” key (Soft key 1).
- Choose “**No**” using key.
- Press “**OK**” key (Soft key 1) to confirm and exit.

6.4.3 Turning off the alarm call

- An alarm call is signalled that the handset rings and “**Alarm**” is blinking (approx.20 sec). Press any key to turn off the alarm call.

6.5 Setting the external call ring tone

It is possible to set up to 13 different melodies and 9 different volume levels of the handset melody for external call or to disable the handset melody. To set the external call ring tone:

6.5.1 Ring Tone setting

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Ext. Ring Tone**” using key.
- Press “**OK**” key (Soft key 1).
- Choose “**Tone**” using key.
- Press “**OK**” key (Soft key 1)
- Choose melody from 1 to 13.
- Press **OK** key (Sot key 1) to confirm

6.5.2 Volume setting

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Ext. Ring Tone**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Volume**” using  key.
- Press “**OK**” key (Soft key 1)
- Choose volume from 1 to 9.
- Press **OK** key (Sot key 1) to confirm

6.5.3 Ring Mode setting

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Ext. Ring Tone**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Ring Mode**” using  key.
- Press “**OK**” key (Soft key 1)
- Choose the items and press “**OK**” key (Soft key 1) to select.
- There are 3 modes: “**Standard**”, “**Disabled**”, “**Ring After #**”
- Choose “**Standard**” for Standard Ring tone to be enabled.
- Or choose “**Disabled**” for Ring tone to be disabled.
- Or choose “**Ring After**” to select ring tone from 1 ring to 4 rings and press “**OK**” key (Soft key 1). Ring tone is enabled after chosen ring number.

6.6 Setting the internal call ring tone

It is possible to set up to 13 different melodies and 9 different volume levels of the handset melody for internal call or to disable the handset melody.

To set the internal call ring tone:

6.6.1 Ring Tone setting

- Press Menu key (Soft key 1) and choose “H/Set Setting”.
- Press “OK” key (Soft key 1).
- Choose “Int. Ring Tone” using key.
- Press “OK” key (Soft key 1).
- Choose “Tone” using key.
- Press “OK” key (Soft key 1)
- Choose melody from 1 to 13.
- Press OK key (Sot key 1) to confirm

6.6.2 Volume setting

- Press Menu key (Soft key 1) and choose “H/Set Setting”.
- Press “OK” key (Soft key 1).
- Choose “Int. Ring Tone” using key.
- Press “OK” key (Soft key 1).
- Choose “Volume” using
- Press “OK” key (Soft key 1)
- Choose volume from 1 to 9.
- Press OK key (Sot key 1) to confirm

6.6.3 Ring Mode setting

- Press Menu key (Soft key 1) and choose “H/Set Setting”.
- Press “OK” key (Soft key 1).
- Choose “Int. Ring Tone” using  key.
- Press “OK” key (Soft key 1).
- Choose “Ring Mode” using  key.
- Press “OK” key (Soft key 1)
- Choose the items and press “OK” key (Soft key 1) to select.
- There are 3 modes: “Standard”, “Disabled”, “Ring After #”
- Choose “Standard” for Standard Ring tone to be enabled.
- Or choose “Disabled” for Ring tone to be disabled.
- Or choose “Ring After” to select ring tone from 1 ring to 4 rings and press “OK” key (Soft key 1). Ring tone is enabled after chosen ring number.

6.7 Setting Keypad Tones

- Press Menu key (Soft key 1) and choose “H/Set Setting”.
- Press “OK” key (Soft key 1).
- Choose “Keypad Tones” using  key.
- Press “OK“ key (Soft key 1).
- Choose “No” to disable the function and choose “Yes” to enable the function.
- Press “OK” key (Soft key 1).

6.8 Setting the backlighting of LCD display

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Lighting**” using  key.
- Press “**OK**“ key (Soft key 1).
- Choose “**Standard**” option to turn on backlighting for 10 seconds.
- Choose “Enabled” option to turn on backlighting always.

6.9 Setting display language

It is possible to choose the display language among English and Italian. To set the language:

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Language**” using  key.
- Press “**OK**“ key (Soft key 1).
- Choose the language among the available ones.
- Press “**OK**” key (Soft key 1) to confirm and exit.

6.10 Direct call

When this function is enabled, press any key on the handset and a call starts automatically to a defined destination number.

To set and activate:

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Direct Call**” using  key.
- Press “**OK**“ key (Soft key 1).

- Insert the phone number (max 25 digits) or use “**Delete**” key (Soft key 2) to erase the previous number and insert the new number.
- Press **OK** key to confirm and activate the function.
- From this moment any key pushed starts an automatic call to the defined number. To disable this function simply press  key twice.

6.11 “BabySit” function

With this function it is possible, with two handsets registered on the same base, to monitor another room. Using the handset it is possible, for example, to monitor a child in another room: simply put the other handset into the room where is the chil.

To enable this function:

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Babysit**” using  key.
- Press “**OK**“ key (Soft key 1).
- Choose “**No**” to disable the function and choose “**Yes**” to enable the function.
- Press “**OK**” key (Soft key 1).

To use this function make an internal call to another handset and place it into the room to check. To stop the room monitoring press  key.

6.12 Subscription

It is possible to register up to 5 handsets of the same telephone model or different brand model compliant GAP. Handset can be registered on up to 4 bases.

6.12.1 Subscribing an optional handset

- Press and hold down the key on the base for 5 seconds or until the base begin to give out a confirmation tone.
- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Subscription**” using  key.
- Press “**OK**“ key (Soft key 1).
- Select the base number (from 1 to 4) where register the handset using  key.
- Press “**OK**” key (Soft key 1).
- Then the handset searches for the base and when it finds the signal, the RFPI code of the base is displayed.
- Press “**OK**” key (Soft key 1) and insert the PIN code (default 1590).
- Press “**OK**” key (Soft key 1) to confirm.

6.12.2 Subscribe a handset on a secondary base

The procedure is the same as previously shown in the 6.11.1 “**Subscribing an optional handset**”. At the end of this procedure the base automatically assign the number to the handset.

If the base, where you want to subscribe a handset, is a different model, use the instruction of this base to put it into the registration mode.

When you need to subscribe a different handset on the base of your telephone, it is necessary to put it into “subscription” mode by pressing and holding the key on the base for 5 seconds until it give out a confirmation tone then follow the specified register procedure for the other handset.

Attention: In any case it is necessary to know the PIN code of the base where register the handset

6.13 Selection of a base

This function is used to select one specific base station among those the handset is currently subscribed to. This selection will not be changed automatically when the handset loses synchronization with base station.

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Select Base**” using  key.
- Press “**OK**“ key (Soft key 1), the display now shows the currently selected base’s number.
- Select the base using  key and then press “**OK**” key (Soft key 1), now handset tries to search the selected base.
- When the base is found, press “**OK**” key (Soft key 1) to confirm.

6.14 Changing the PIN code on the handset

The modification of PIN code can be useful to prevent the modification of any setting of the handset or to prevent the use of the phone by unauthorised person.

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.

- Press “**OK**” key (Soft key 1).
- Choose “**Modify Pin**” using  key.
- Press “**OK**“ key (Soft key 1) and insert the previous PIN code (default 1590). Use **Delete** key to erase wrong entered code.
- Press “**OK**” key (Soft key 1).
- Enter the new code (max. 4 digits).
- Press “**OK**” key (Soft key 1) and enter the new code again.
- Press “**OK**” key (Soft key 1) to confirm and exit.

6.15 Reset the handset

The Reset operation allows the user to erase all the customized settings including the phone book and the received caller ID list. There are three reset levels available:

Phone Book: Erase all the stored number in the phone book, the received calls list, missed calls list and dialled calls list.

Settings: Restore the default settings.

Handset : Combination of the previous two points

To execute one of the three reset functions with the handset in stand-by mode:

- Press **Menu** key (Soft key 1) and choose “**H/Set Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Reset Handset**” using  key.
- Press “**OK**” key (Soft key 1).
- Insert the PIN code of the handset. (The default Handset PIN is **1590.**)
- Press “**OK**” key (Soft key 1).

- Choose the type of reset and press **OK** key (Soft key 1) to confirm and exit.

7. Base settings

Access to the Base Setting Menu

It is possible to customize the functionality of the base using the operations of below.

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Press **“Back**” key (Soft key 2) or  key to return to the previous menu and press  key to return to stand-by mode.

7.1 Setting the Base Ring Tone

7.1.1 Tone setting

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Base Ring Tone**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Tone**” using  key.
- Press “**OK**” key (Soft key 1)
- Choose tone from “**Tone 1**” to “**Tone 9**” using  key.
- Press **OK** key (Sot key 1) to confirm

7.1.2 Volume setting

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Base Ring Tone**” using  key.
- Press “**OK**” key (Soft key 1).
- Choose “**Volume**” using  key.

- Press “**OK**” key (Soft key 1)
- The display will show the previously stored volume level.
- Choose tone from “**Volume 1**” to “**Volume 9**” using  key.
- Press **OK** key (Sot key 1) to confirm.

7.1.3 Ring Mode

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Ring Mode**” using  key.
- Press “**OK**” key (Soft key 1)
- Choose the items and press “**OK**” key (Soft key 1) to select.
- There are 3 modes: “**Standard**”, “**Disable**”, “**Ring After**”
- Choose “**Standard**” for Standard Ring tone to be enabled.
- Or choose “**Disable**” for Ring tone to be disabled.
- Or choose “**Ring After**” to select ring tone from 1 ring to 4 rings and press “**OK**” key (Soft key 1). Ring tone is enabled after chosen ring number.

7.2 Automatic pause for PABX connection

If the telephone is connected to a PABX, it is possible to set the access code to get the external line (usually 0 or 9). This gives the possibility to insert a pause between the dial of the access code and the phone number.

To do that:

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Auto. Pause**” using  key.
- Press “**OK**” key (Soft key 1)

- Insert the PABX access code (1digit) after “**External access number:**”.
- Press **OK** key to confirm.

To disable automatic pause:

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Auto. Pause**” using  key.
- Press “**OK**” key (Soft key 1)
- Press “**Delete**” key (Soft key 2) to delete the PABX access code (1digit) after “**External access number:**”
- Press “**OK**” key (Soft key 1) to confirm and automatic pause is disabled.

Note: If the automatic pause is set, the phone number in the Phone Book and Received Calls have pause function automatically.

7.3 Disable Handset from Base

It is possible to deregister one or more handsets previously subscribed on the same base.

To deregister a handset:

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Disable Handset**” using  key.
- Press “**OK**” key (Soft key 1).
- Then “**Base PIN:_**” will appear.

- Enter the PIN code (default 1590). Use **Delete** key (Soft key 2) to erase wrong entered code.
- Press “**OK**” key (Soft key 1)
- Choose the handset number using  key.
- Then “**Disable Handset # ?**” will appear.
- Press **OK** key (Sot key 1) to confirm

7.4 Changing the Base PIN

The modification of the base PIN code can be useful to lock the important settings of the base. The default PIN (Personal Identity Number) is 1590.

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Modify PIN**” using  key.
- Press “**OK**” key (Soft key 1).
- Then “**Base PIN:_**” will be shown on the display.
- Enter the PIN.
- Press “**OK**” key (Soft key 1)
- If the PIN is not right, the display will show “**Wrong PIN**”.
- Then “**New PIN:_**” will be shown on the display.
- Enter the new PIN.
- Press “**OK**” key (Soft key 1).
- Then “**Repeat PIN:_**” will be shown on the display.
- Enter the new PIN again.
- Press “**OK**” key (Soft key 1) to confirm.

7.5 Call Barring

Up to 5 barring locations with up to 5 digits can be barred. It is possible to specify the number and handset which can not make a call to that prefix.

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Call Barring**” using  key.
- Press “**OK**” key (Soft key 1).
- Then “**Base PIN:_**” will be shown on the display.
- Enter the PIN.
- Press “**OK**” key (Soft key 1).
- Then “**Prefix 1:_**” will be shown on the display.
- Note: When you delete the stored barring number and press **OK** key, Call barring function is disabled and display shows “*Call Barring disabled*”.
- Insert the new barring number to lock or use  key to go to the next barring location and enter barring number.
- When the editing of the barring number is finished, press **OK** key to confirm. The display will show “Handset 1” or the stored handset number.
- Choose the handsets which will be locked for that prefix using key  .
- Press “**OK**” key (Soft key 1) to confirm.
- The display shows “**Call Barring set**” and Now the call barring function is enabled and it is not possible to make a call with the stored barring number.

7.6 Base Reset

With this operation it is possible to reset the base to the default value including the base PIN that will become “1590”.

***Attention*: if you choose this base reset option, you erase all the registered handsets including the primary handset (the display will show “*Not Subscribed*”). So it will be necessary to make a new registration procedure.**

- Press **Menu** key (Soft key 1) and choose “**Base Setting**”.
- Press “**OK**” key (Soft key 1).
- Choose “**Base Reset**” using  key.
- Press “**OK**” key (Soft key 1).
- Then “**Base PIN:_**” will be shown on the display.
- Enter the PIN.
- Press “**OK**” key (Soft key 1)
- If the PIN is not right, the display will show “**Wrong PIN**”.
- Then “**Rest Base ?**” will be shown on the display.
- Press “**OK**” key (Soft key 1).
- After few seconds “**Not Subscribed**” will be shown on the display and now Base is in the waiting subscription mode.

8. Appointment

8.1 Setting the appointment

- Press **Menu** key (Soft key 1).
- Choose “**Appointment**” using  key.
- Then “**No appointment set**” will be shown on the display.
- Press “**Set**” key (Soft key 1).
- Choose one among “**Annual**”, “**Monthly**” and “**Daily**”.
- Set the date and time.
- Annual: day/month and time
- Monthly: day and time
- Daily: time
- Press “**OK**” key (Soft key 1).
- Enter the text of appointment. Every key have more characters like specifying in the phone book table:
- After the character insertion wait a second to insert the next character**.**
- During the character insertion press “**Delete**” key (Soft key 2) to erase the last character.
- Press “**OK**“ key (Soft key 1).
- Press “**Enable**“ key (Soft key 2) to enable the appointment.
- Press  key to exit the menu.

8.1.1 Modifying the date of appointment

- Press **Menu** key (Soft key 1).
- Choose “**Appointment**” using  key.
- Press “**OK**“ key (Soft key 1)
- Then the current appointment setting will be displayed.
- Press “**Options**“ key (Soft key 1).

- Choose item “**Modify Date**”.
- Press “**OK**“ key (Soft key 1).
- Then the current date and time is displayed
- Change the date and time.
- Press “**OK**” key (Soft key 1) to confirm

8.1.2 Modifying the subject of appointment

- Press **Menu** key (Soft key 1).
- Choose “**Appointment**” using  key.
- Press “**OK**“ key (Soft key 1)
- Then the current appointment setting will be displayed.
- Press “**Options**“ key (Soft key 1).
- Choose item “**Modify Text**”.
- Press “**OK**“ key (Soft key 1).
- Then the current “**Text Appoint.:**” is displayed.
- Change the Text.
- Press “**OK**” key (Soft key 1) to confirm.

8.1.3 Deleting the appointment

- Press **Menu** key (Soft key 1).
- Choose “**Appointment**” using  key.
- Press “**OK**“ key (Soft key 1)
- Then the current appointment setting will be displayed.
- Press “**Options**“ key (Soft key 1).
- Choose item “**Delete**”.
- Press “**OK**“ key (Soft key 1).
- Then the “**Delete the appointment?**” is displayed.
- Press “**OK**“ key (Soft key 1) to confirm and then the current appointment setting is deleted.

8.1.4 Viewing the subject of appointment

- Press **Menu** key (Soft key 1).
- Choose “**Appointment**” using  key.
- Press “**OK**“ key (Soft key 1)
- Then the current appointment setting will be displayed.
- Press “**Options**“ key (Soft key 1).
- Choose item “**View Text**”.
- Press “**OK**“ key (Soft key 1).
- Then the subject is displayed.

8.1.5 Reminding the appointment

- A sound advises at the moment of the appointment and the text of appointment is displayed.
- If you want to remind the appointment, press “**Remind**” key.
- Enter the minute. The appointment is reminded after this.
- Press “**OK**” key (Soft key 1) to confirm.

Guarantee Certificate

Dear customer,

Thank you for your trust proven in purchase of the H3000. You have obtained a quality device which provided that used properly will serve for a long time.

Should you need any advice or help, our technicians are available to you during working hours on the telephone number 055 / 30 12345.

You may also contact us by e-mail on the e-mail address: info@antiktech.sk.

Our technicians will give you any advice or will recommend delivering your phone to the service centre at the address:

Antik Technology

Čárskeho 10

040 01 Košice

Conditions of Guarantee:

1. The guarantee relates to failure-free operation of the telephone as well as its accessories for the period of twenty-four (24) months. The power supply unit and receiver cable are supplied as standard accessories to the telephone. The period of guarantee starts on the date of taking over the telephone and its accessories by the purchaser. The date must be indicated in the Guarantee Certificate.

2. The guarantee shall be confirmed only if the certificate of payment is provided with this fully and duly filled-in Guarantee Certificate.

3. The guarantee does not apply if the type of the product or its serial number has been changed or removed.

4. In case of claiming the guarantee repair of the accessories which have been installed, the guarantee shall be confirmed only if the purchaser at the same time submits the Contract on Providing Public Telephone Service by Antik.

5. The guarantee does not relate to errors caused due to:

• using the product which is in conflict with the operation manual,

• mechanical damage,

• the product's contact with water or other liquids which leaked inside,

• repair carried out by an unauthorized service centre,

• improper storage and usage out of the heat range stated in the operation manual,

• storing and using the product in humid, dusty, chemically or otherwise aggressive environment - oxidation. The guarantee does not relate to failure caused due to:

• natural disasters.

6. A defect of the purchased item shall be any imperfections of its properties or demonstration which especially regarding the contents of the contract on purchase in the store or the seller's statement on guaranteed properties, or regarding the provisions of legal regulations or technical standards the purchased item should have. A defect of the item is also imperfection of its property or demonstration which are generally expected with items of this kind which are sold in the store. The guarantee does not relate to common wear and tear of the product due to using it.

7. If it is a defect which can be removed, the purchaser has the right to have it removed for free. The purchaser may instead of removing the defect require changing the item or, if the defect relates only to a part of the item, changing the part only when no unreasonable costs regarding the price of the goods or error severity accrue to the seller.

8. The period from claiming the right in relation to responsibility for defects up to the time when the purchaser was obliged to take over the item after repair completion is not included in the period of guarantee.

Guarantee is provided for this phone for the period of twenty-four (24) months from the date of receiving by the purchaser.

Guarantee is to be applied with the seller.

Phone type ....

(Filled by the seller)

Date of purchase ....

(Filled by the seller)

Stamp and signature of the seller:

Reference number	Date of receiving	Date of the servis	New serial number	Stamp and signature of the servis
Reference number	Date of receiving	Date of the servis	New serial number	Stamp and signature of the servis
Reference number	Date of receiving	Date of the servis	New serial number	Stamp and signature of the servis
Reference number	Date of receiving	Date of the servis	New serial number	Stamp and signature of the servis